



PARTS CATALOG

Robin

Generator










Model










RGV2800












FUJI HEAVY INDUSTRIES LTD.

ISSUE EMD-GP1124

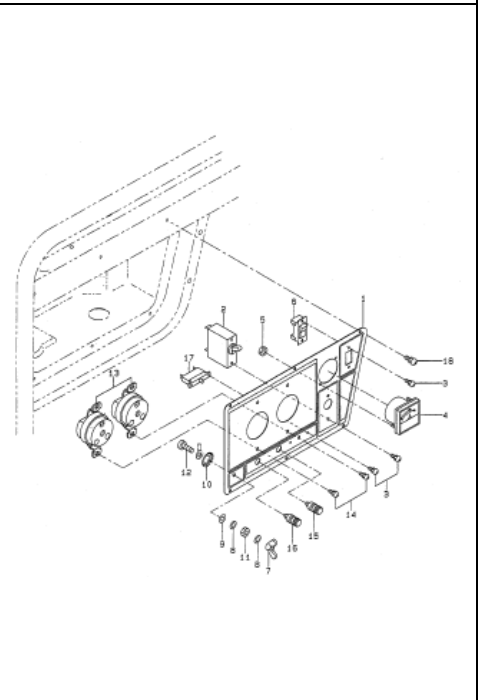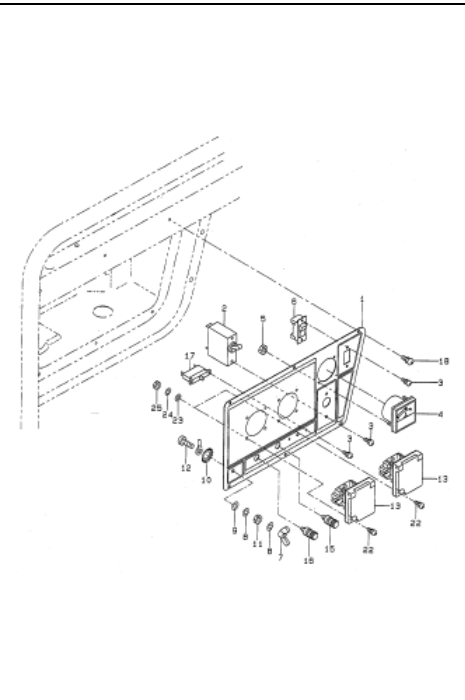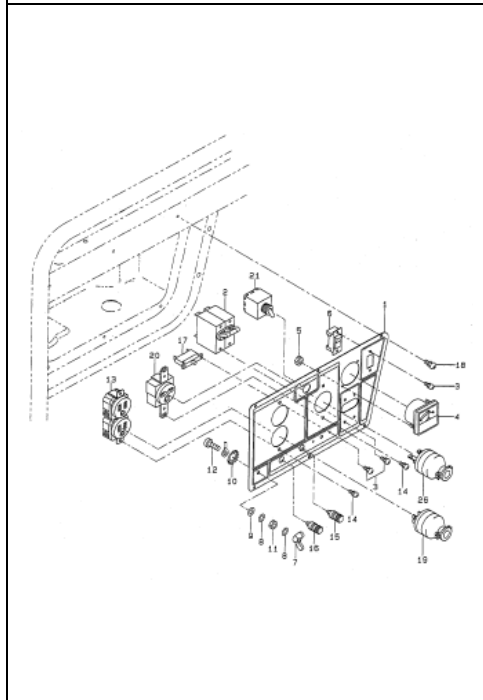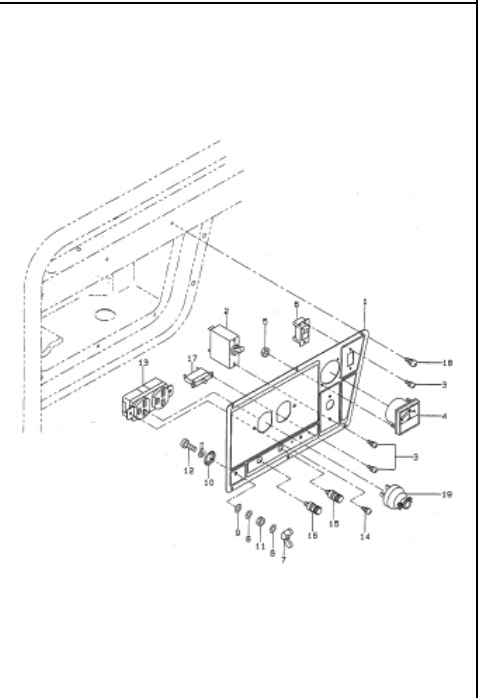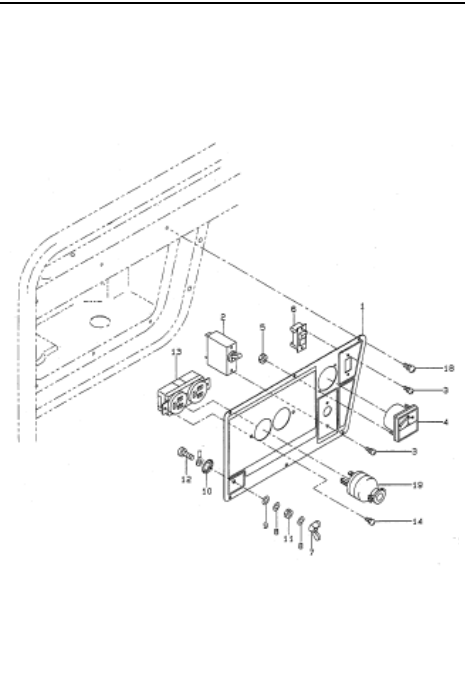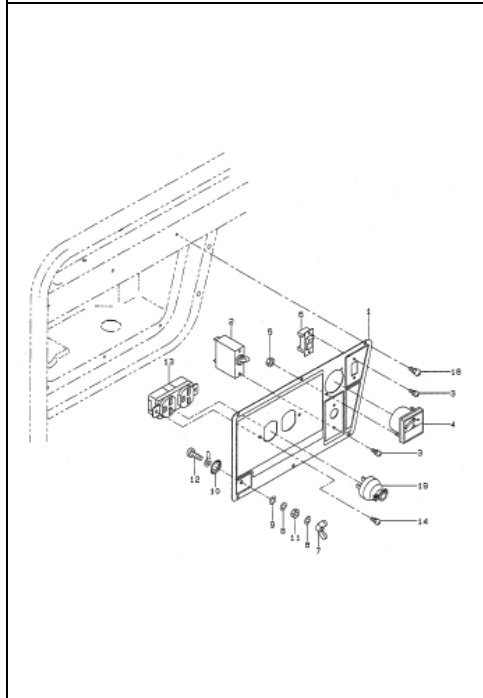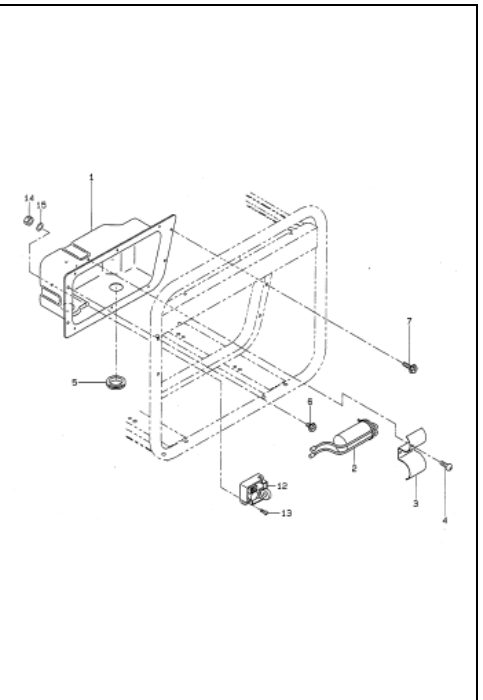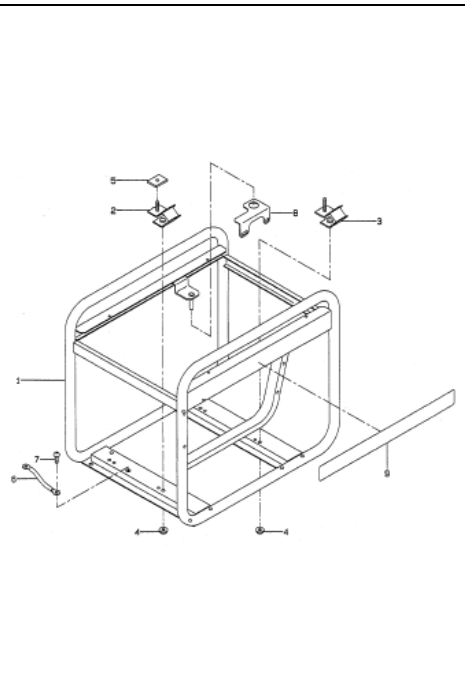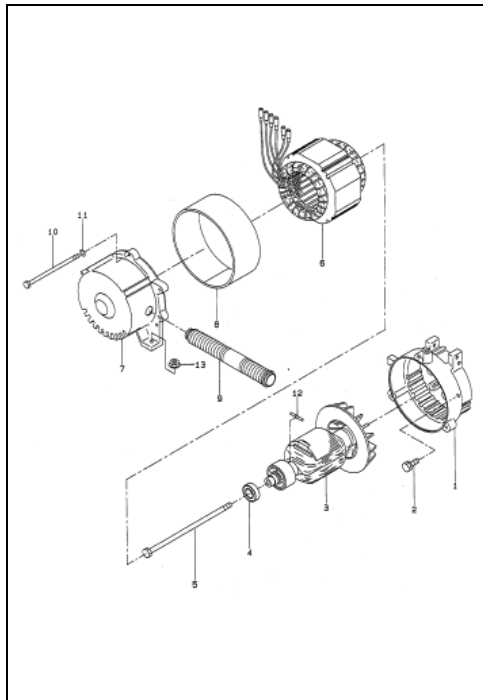

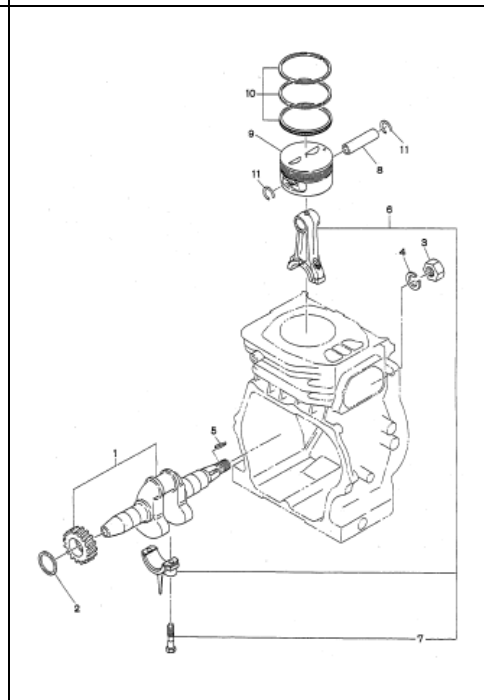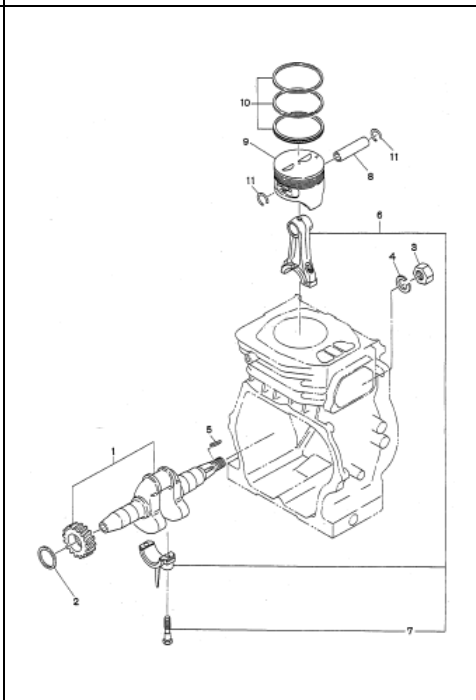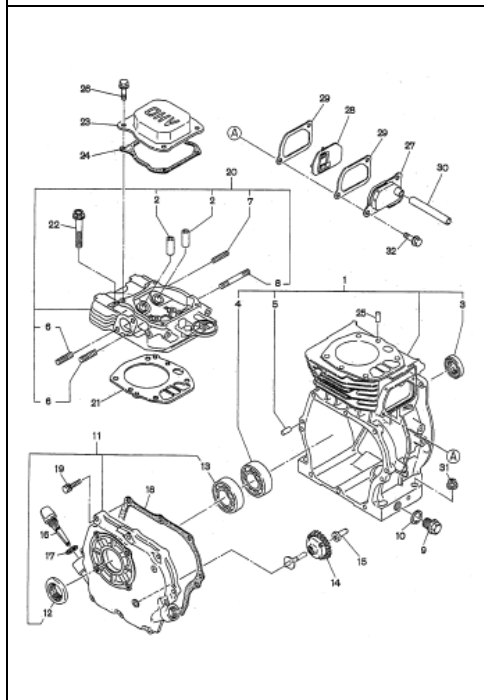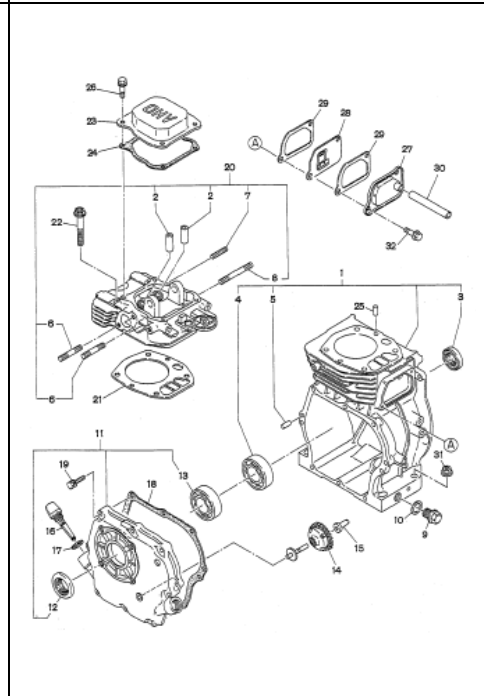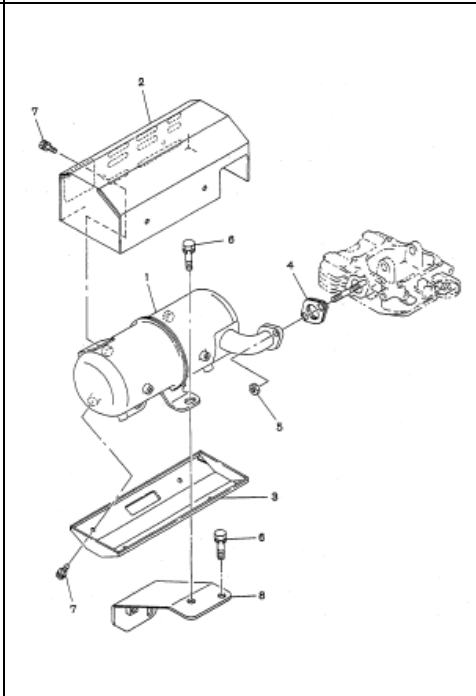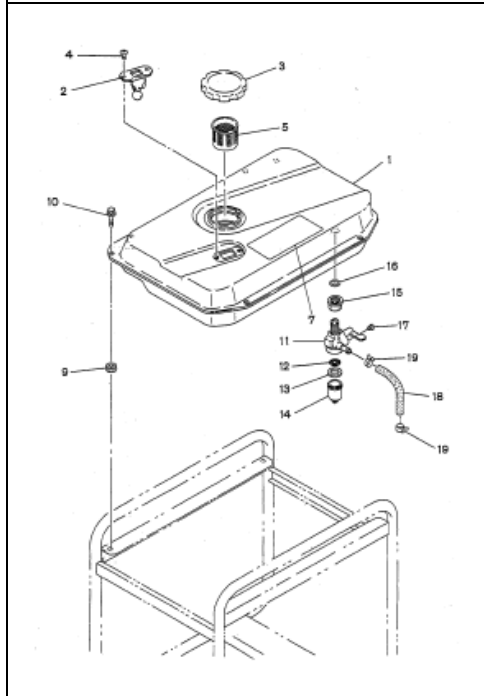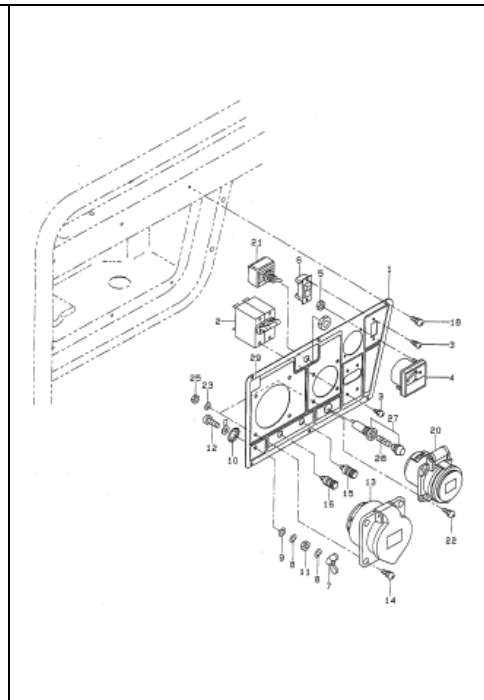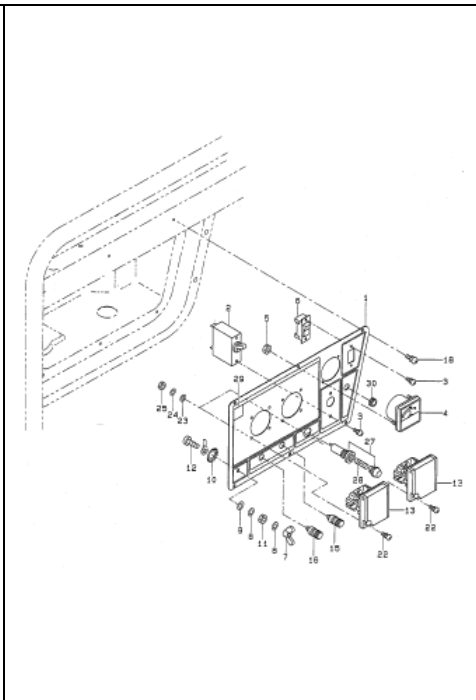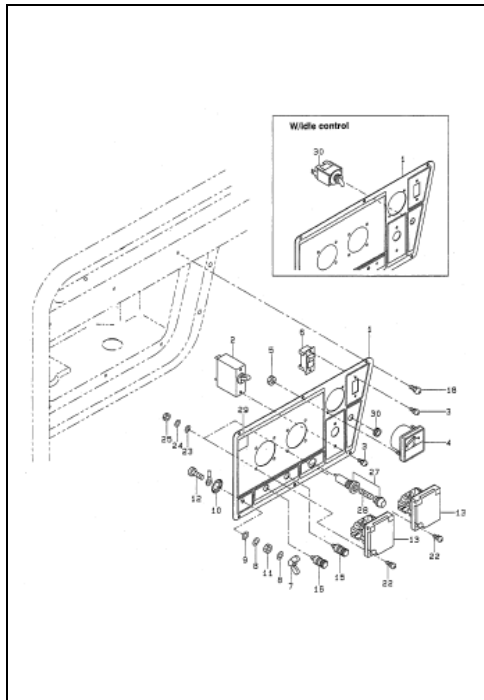

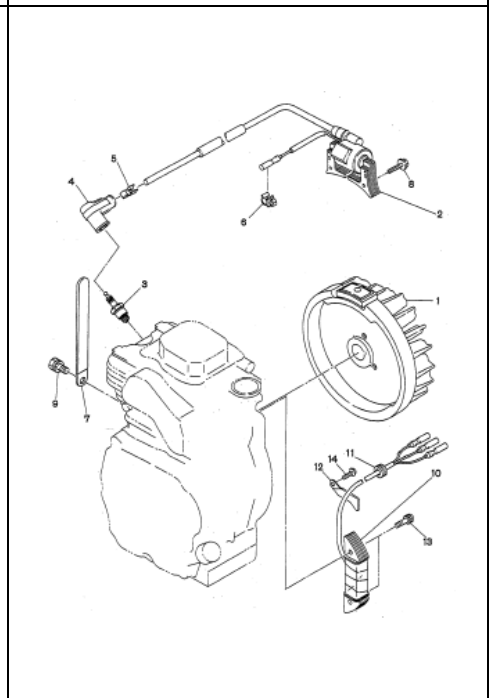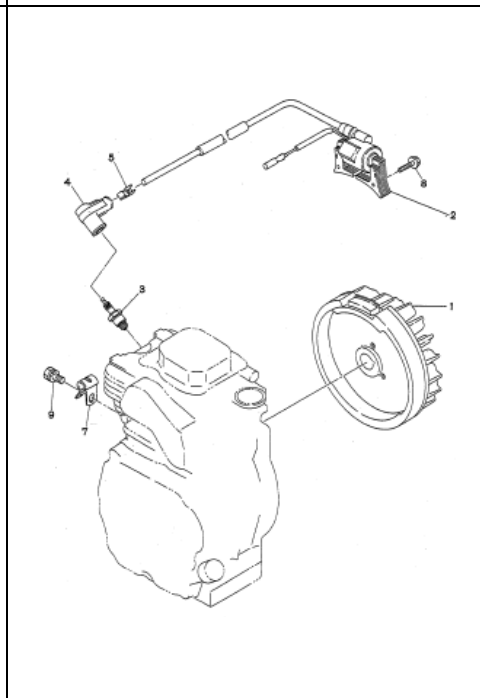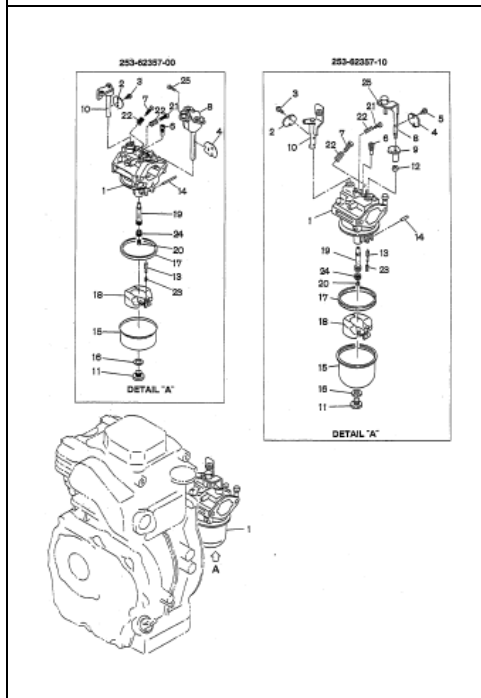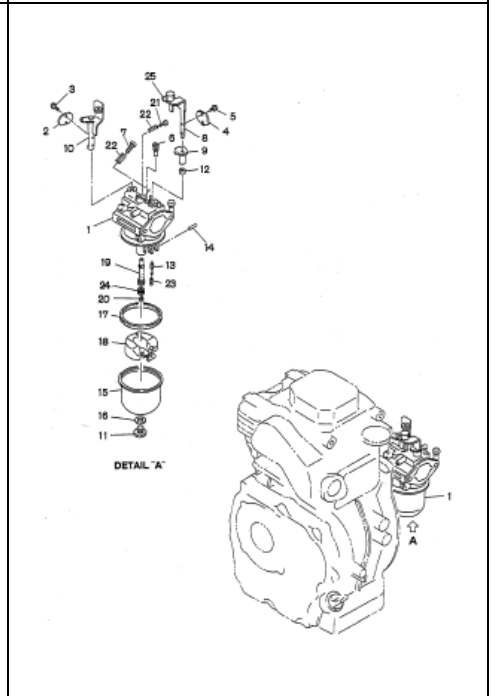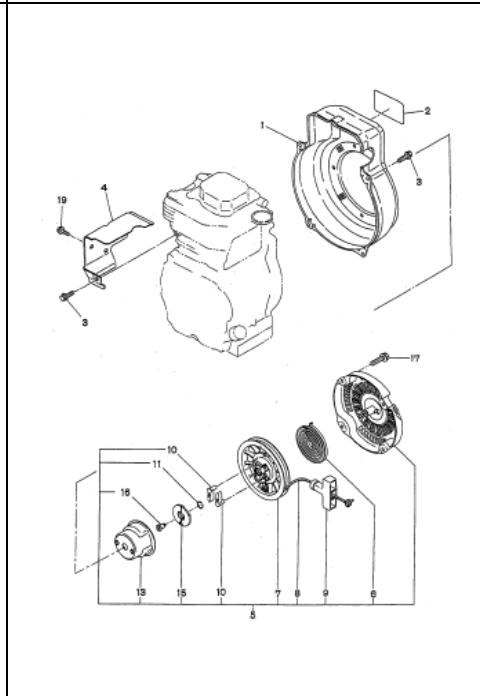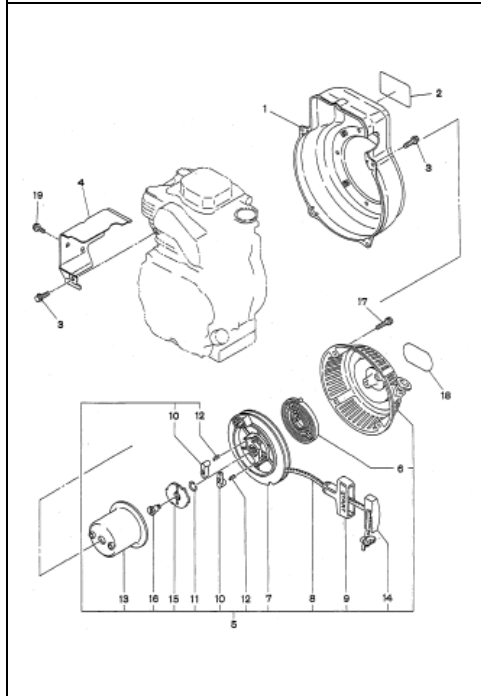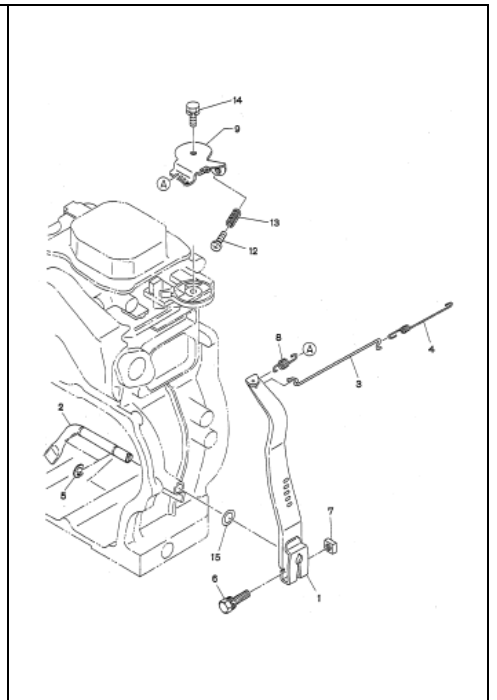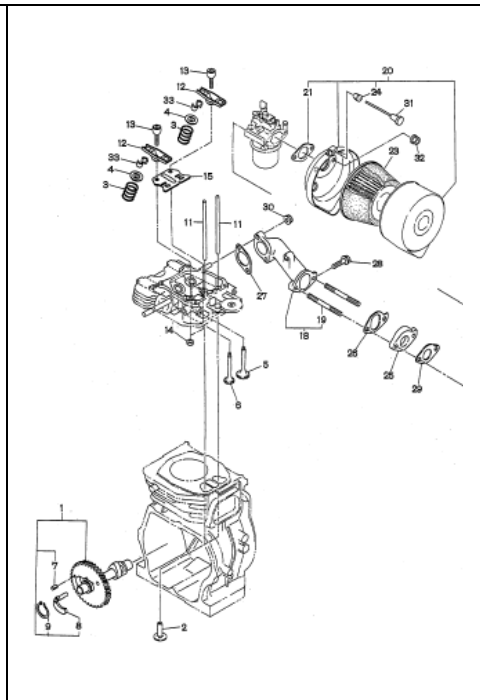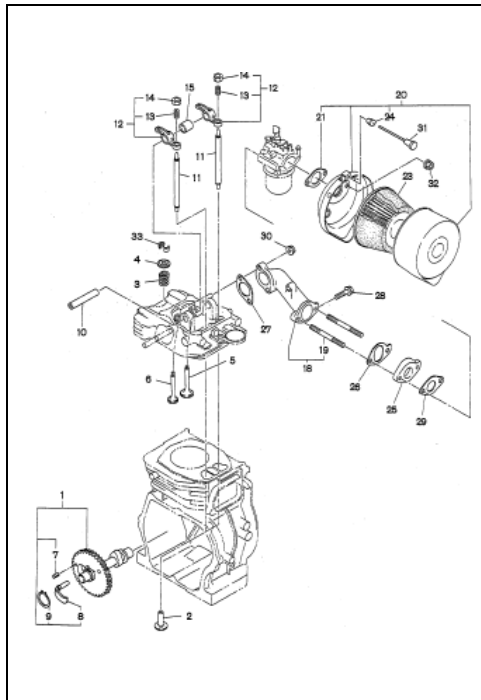


 
 
 
 
 
 





FIG.1 GENERATOR

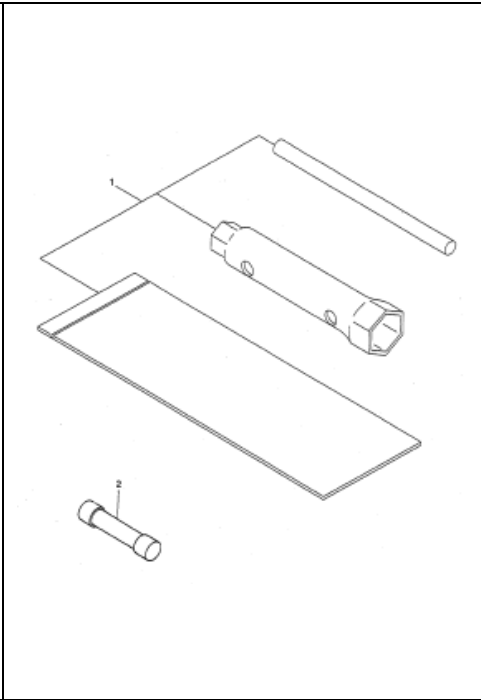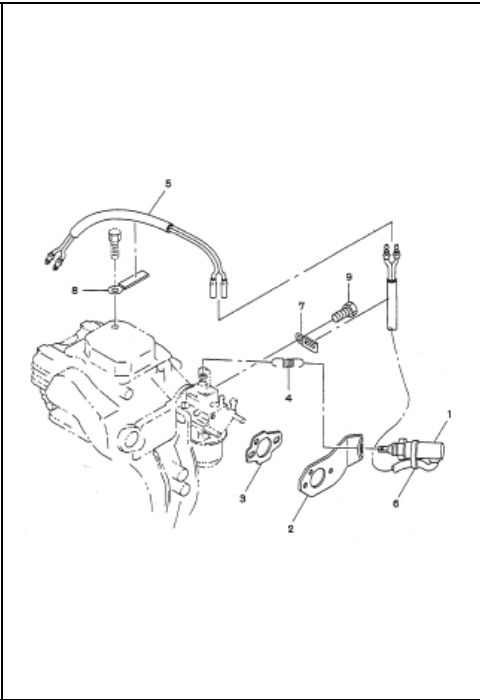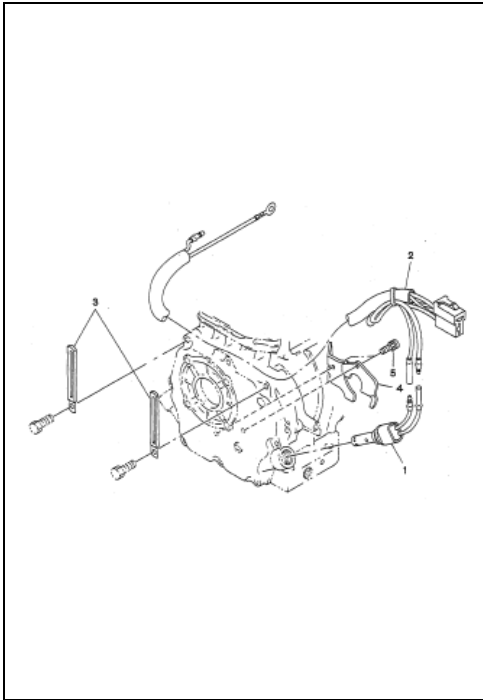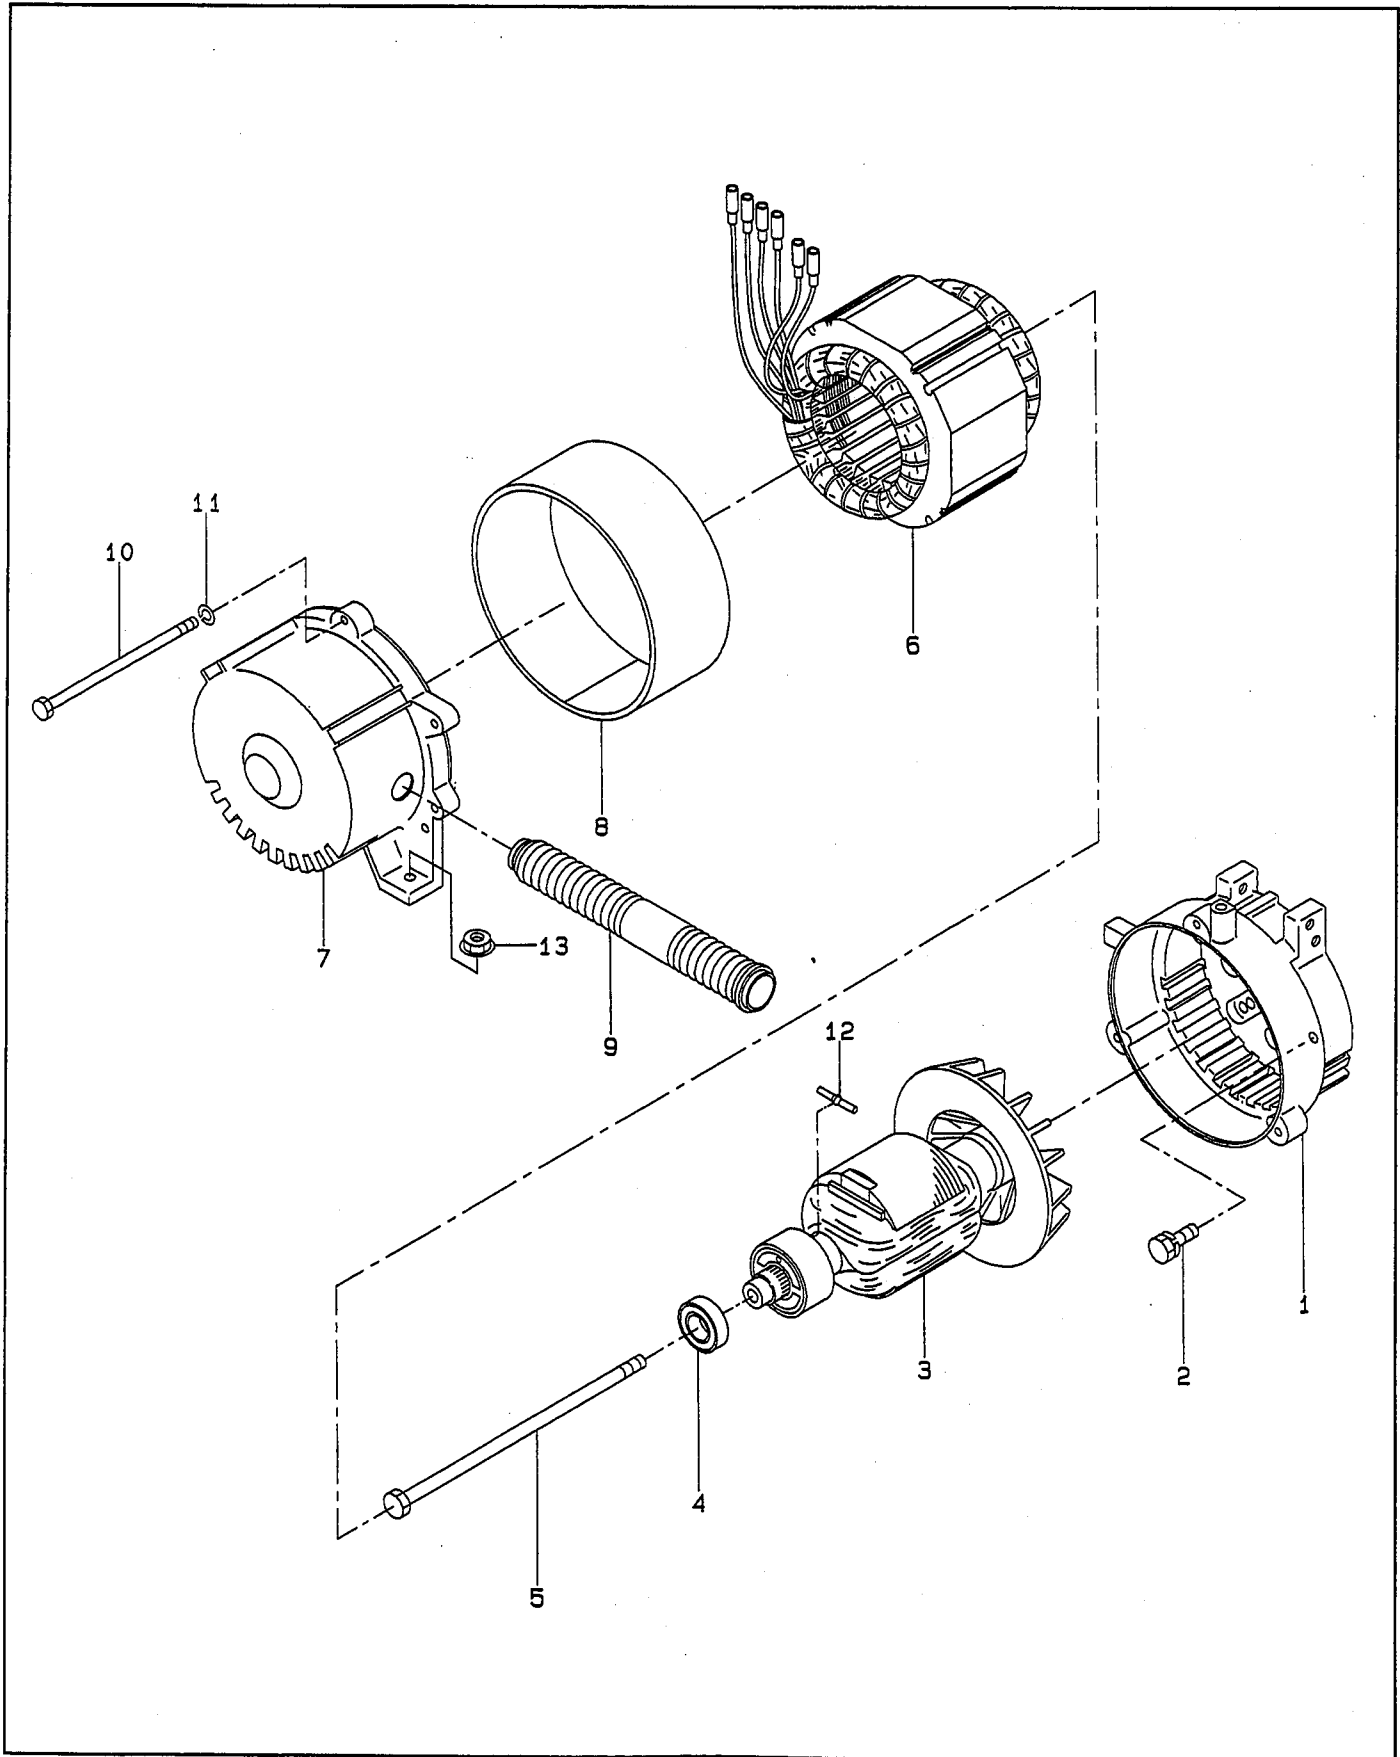

↯ Interchangeability

-2-

FIG.2 PIPE FRAME


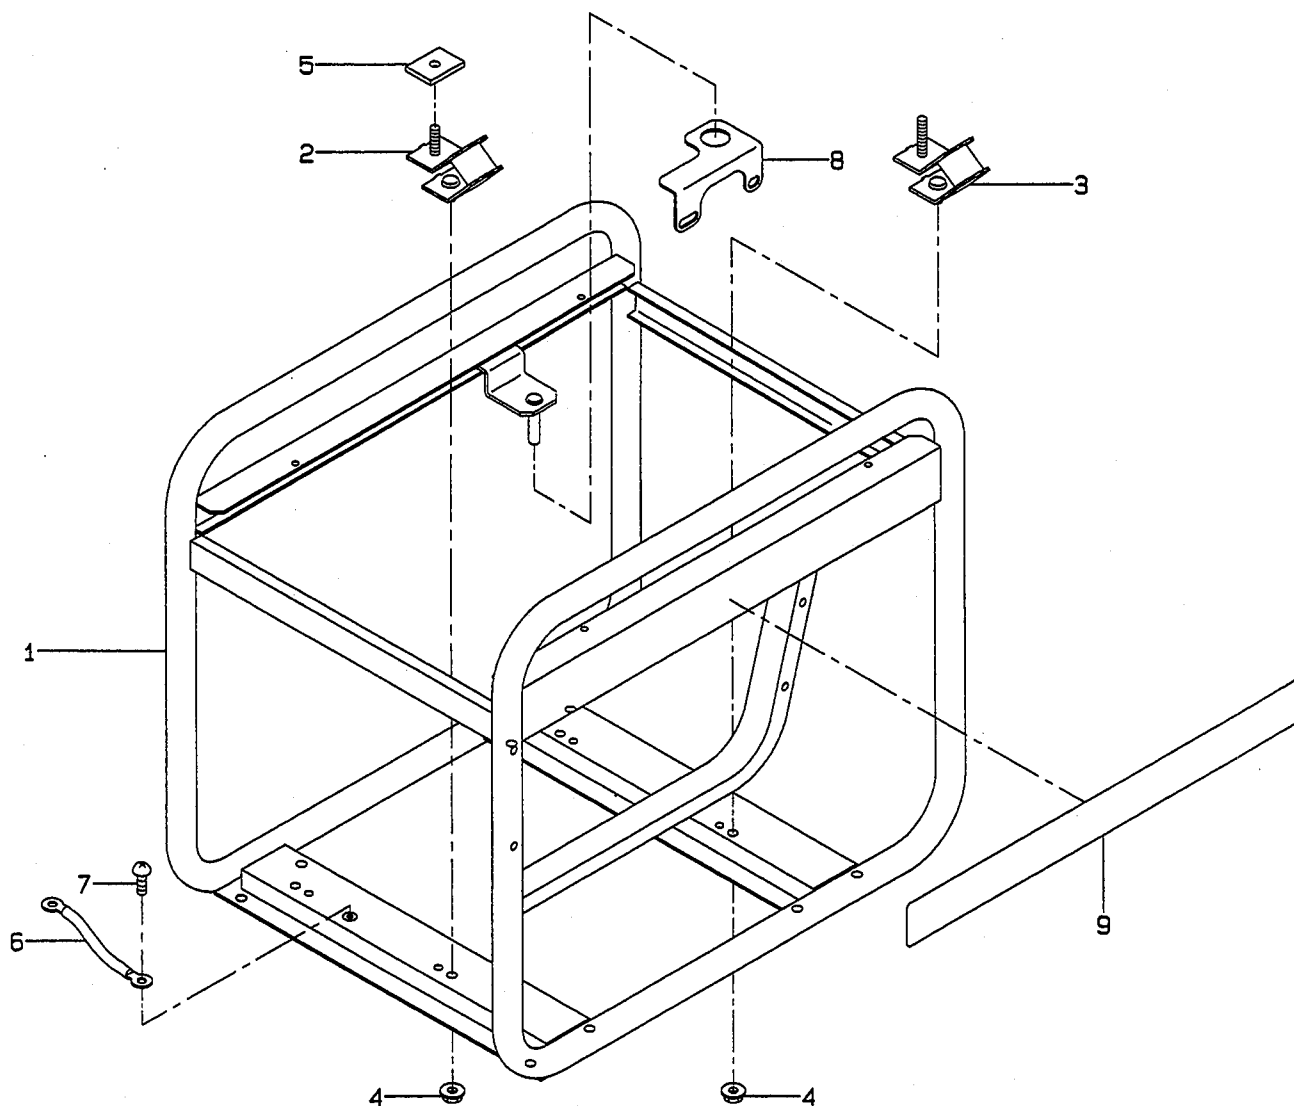


FIG.2 PIPE FRAME

[illegible]

FIG.3 CONTROL BOX

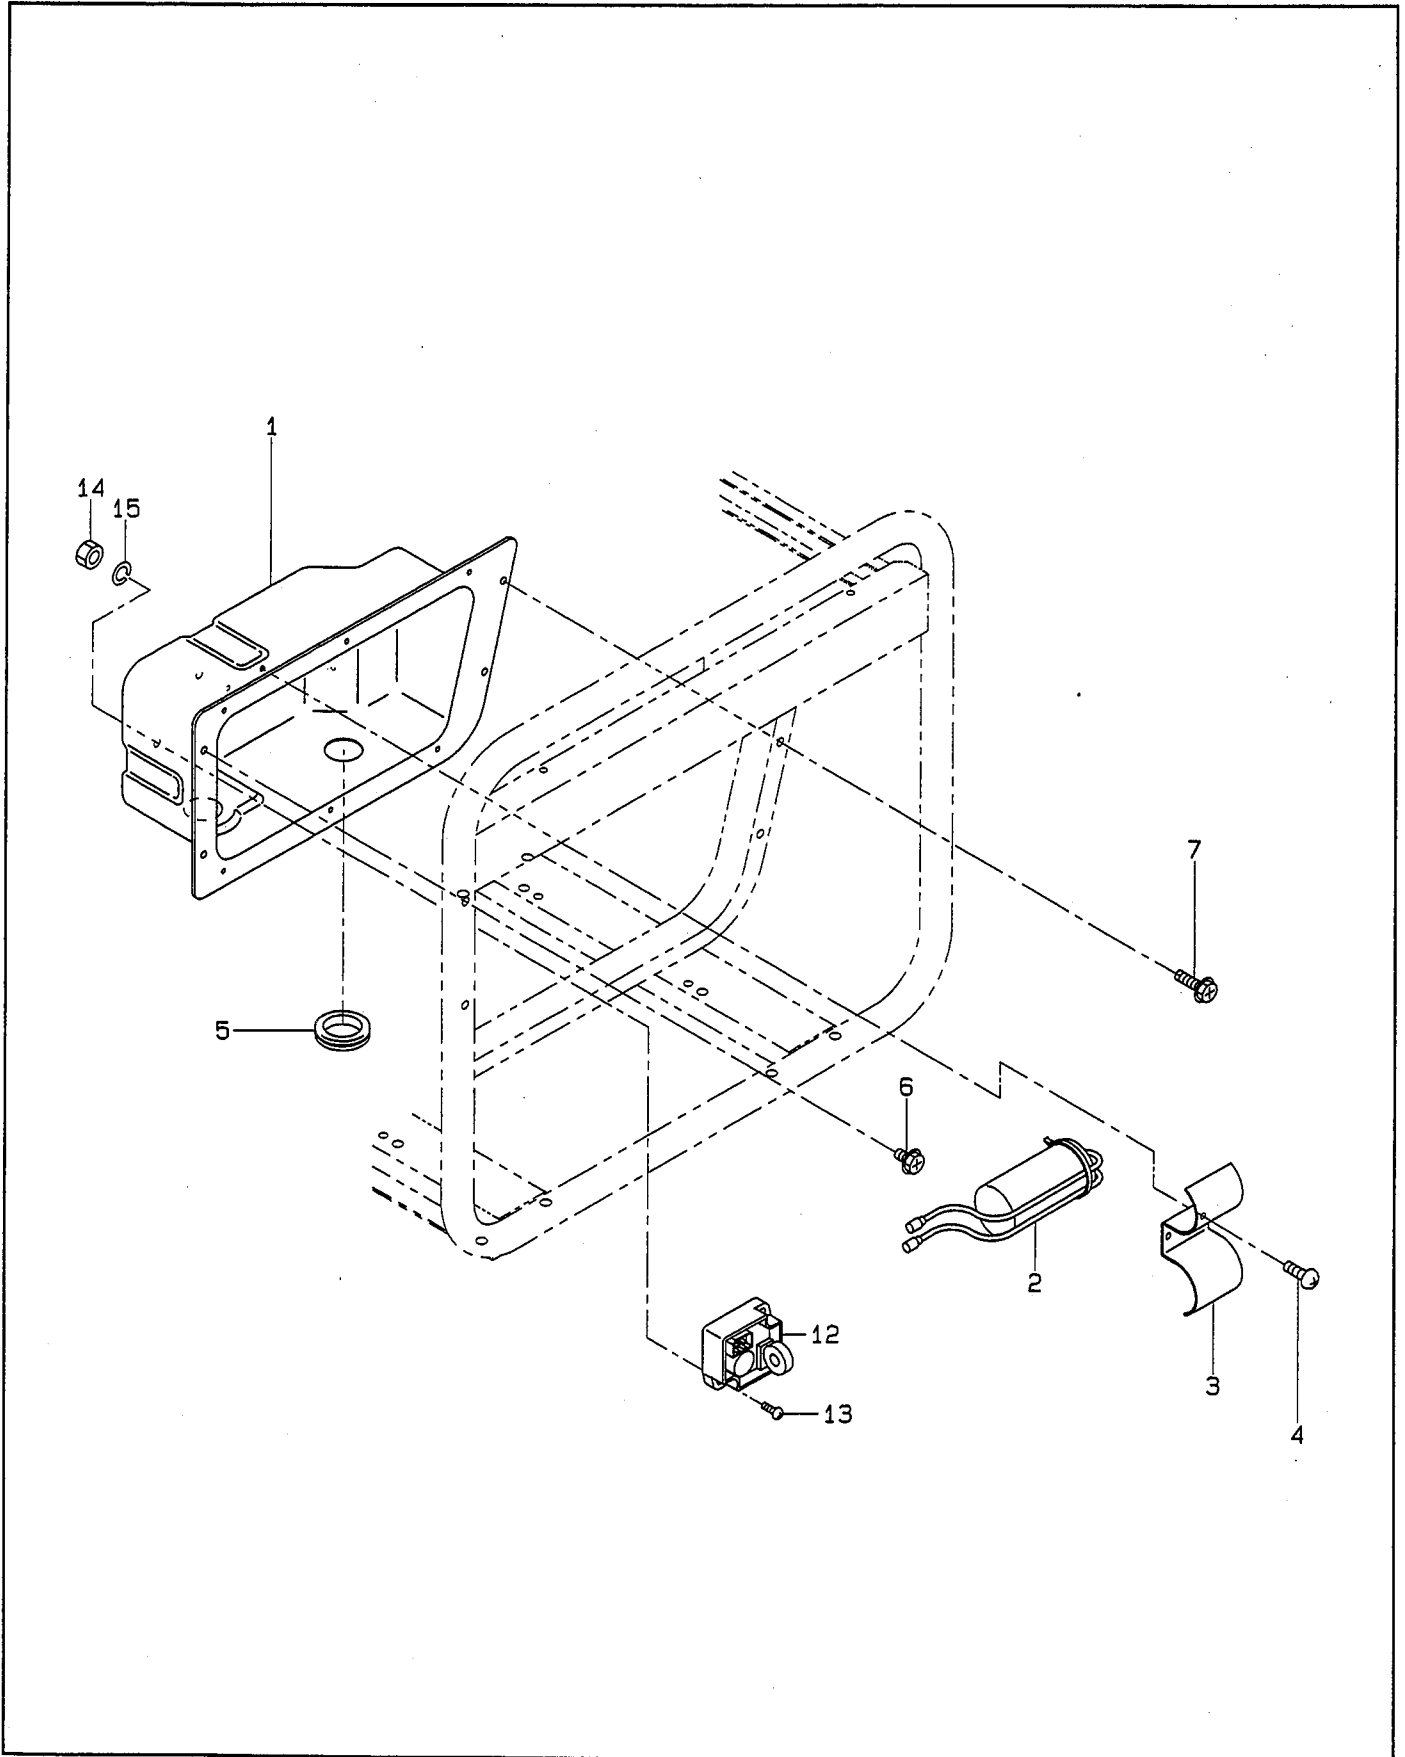

↯ Interchangeability

- 6 -

FIG.4-1 CONTROL PANEL (220V)

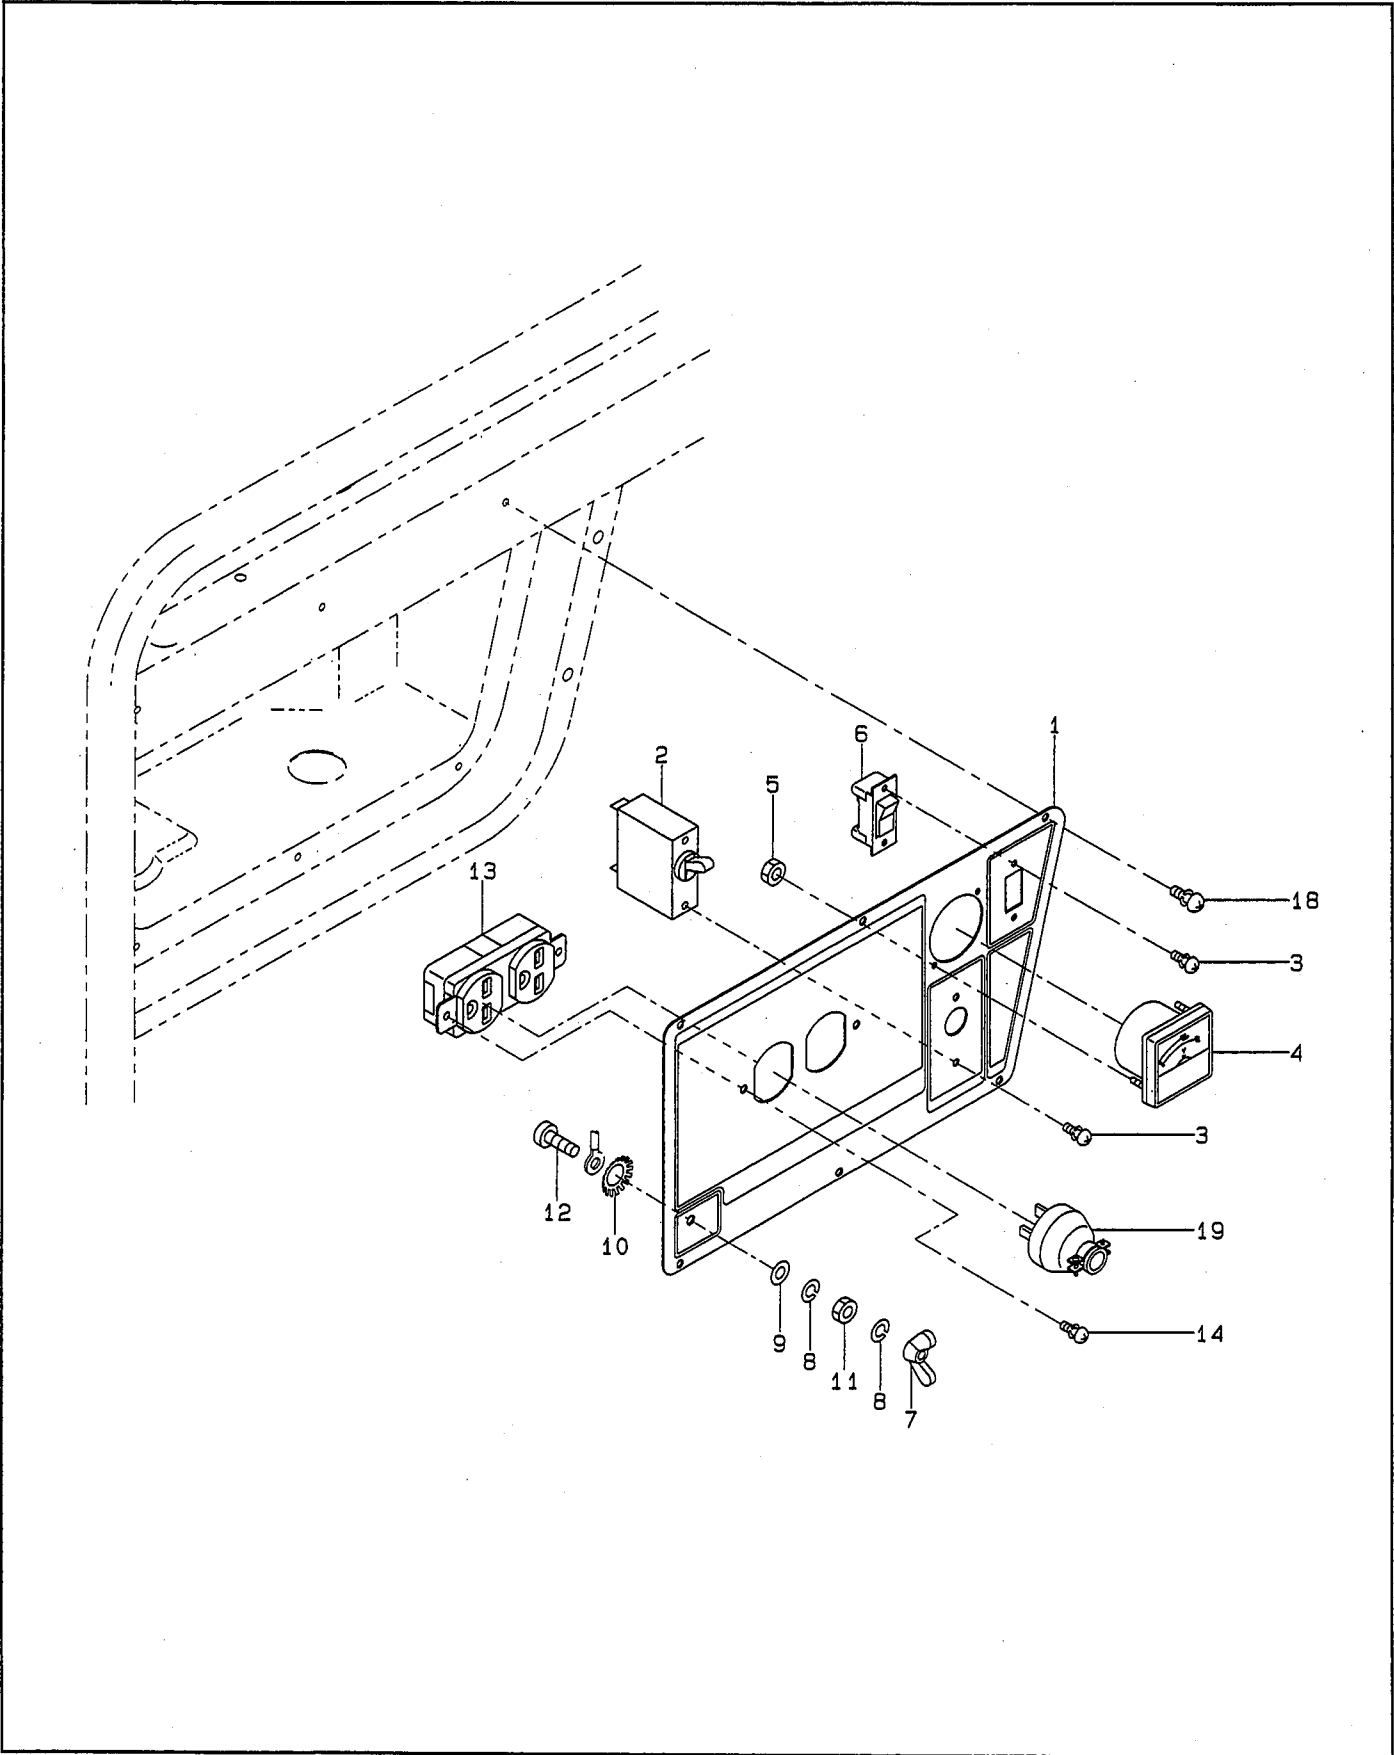


FIG.4-1 CONTROL PANEL (220V)

[illegible]

FIG.4-2 CONTROL PANEL (60Hz-110V)


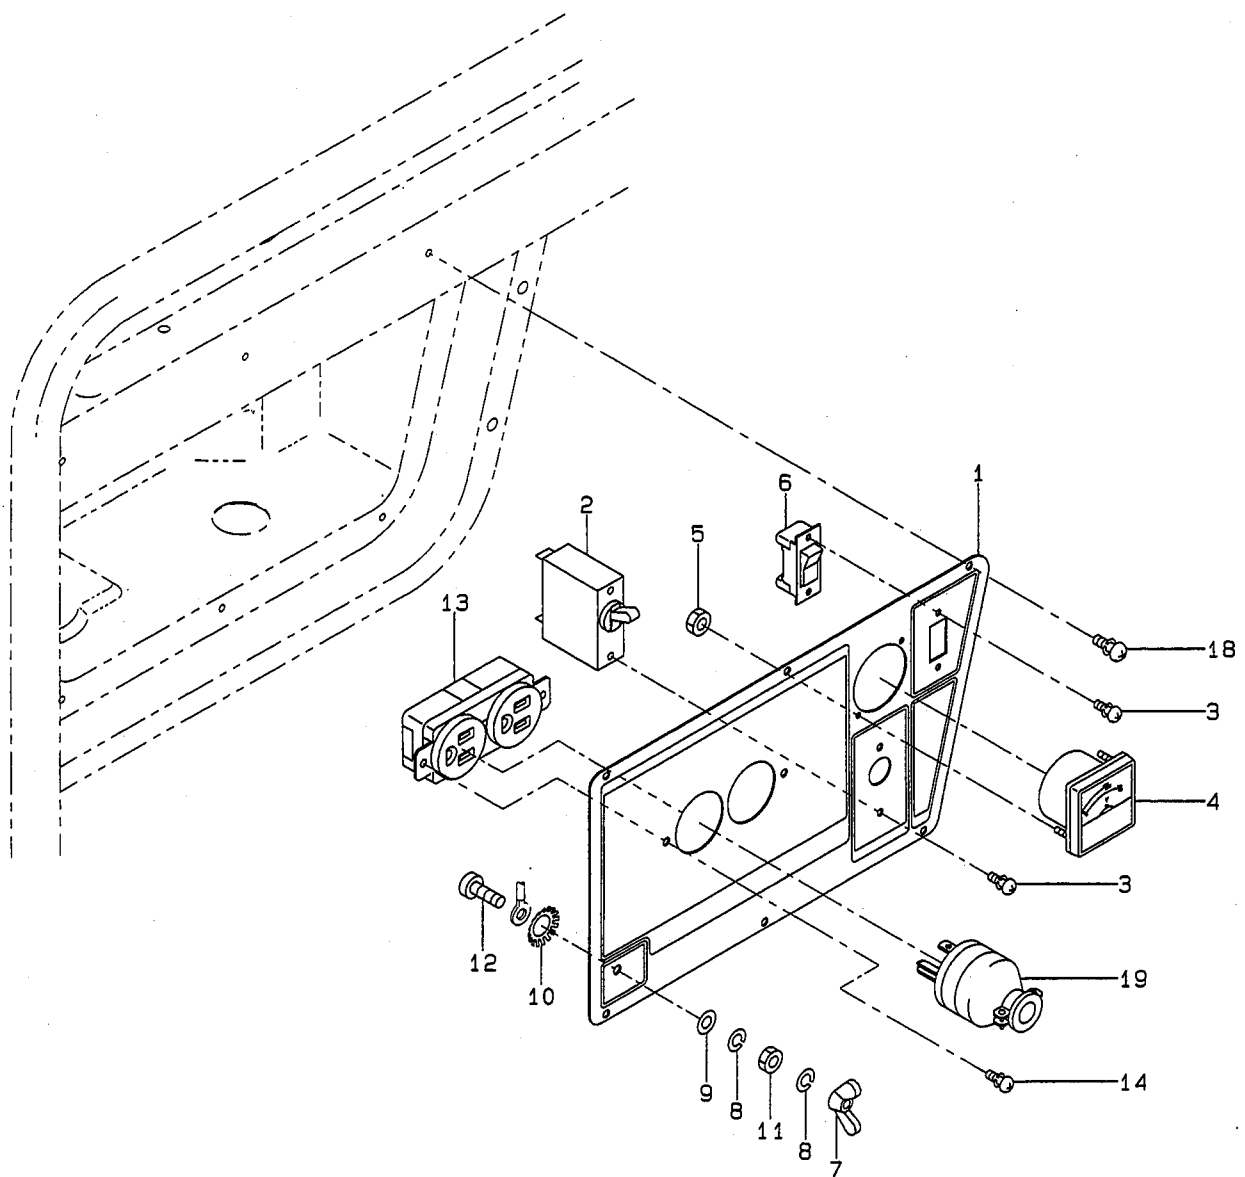


FIG.4-2 CONTROL PANEL (60Hz-110V)

[illegible]


FIG.4-3 CONTROL PANEL (220V, WITH DC)

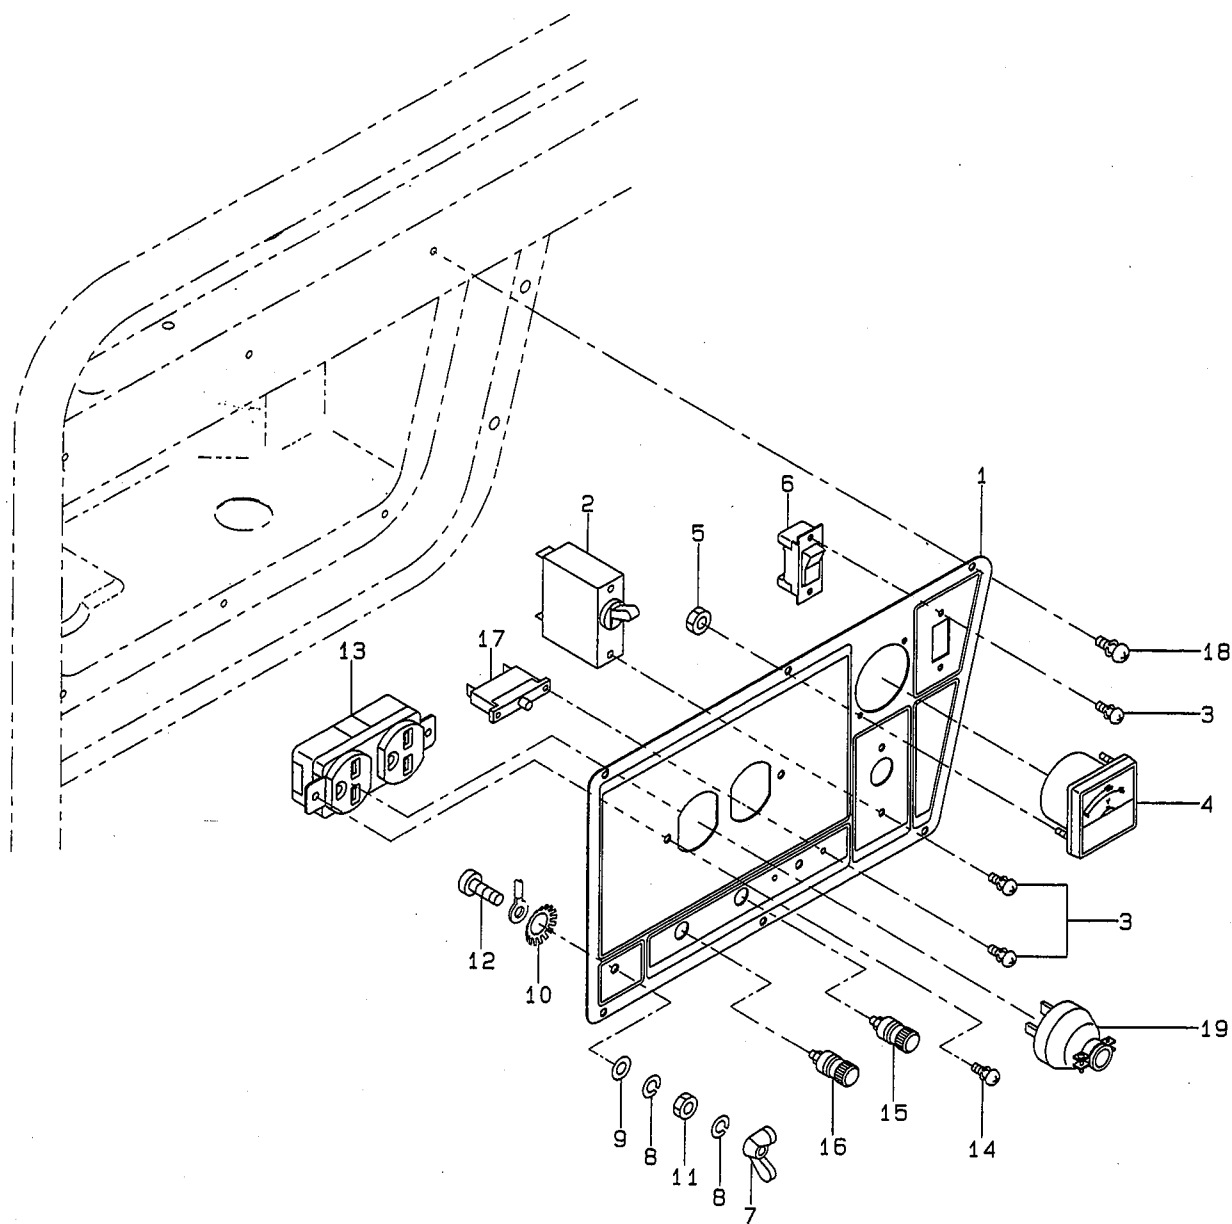

↯ Interchangeability

-12-

FIG.4-4 CONTROL PANEL (110V/220V, 120V/240V)

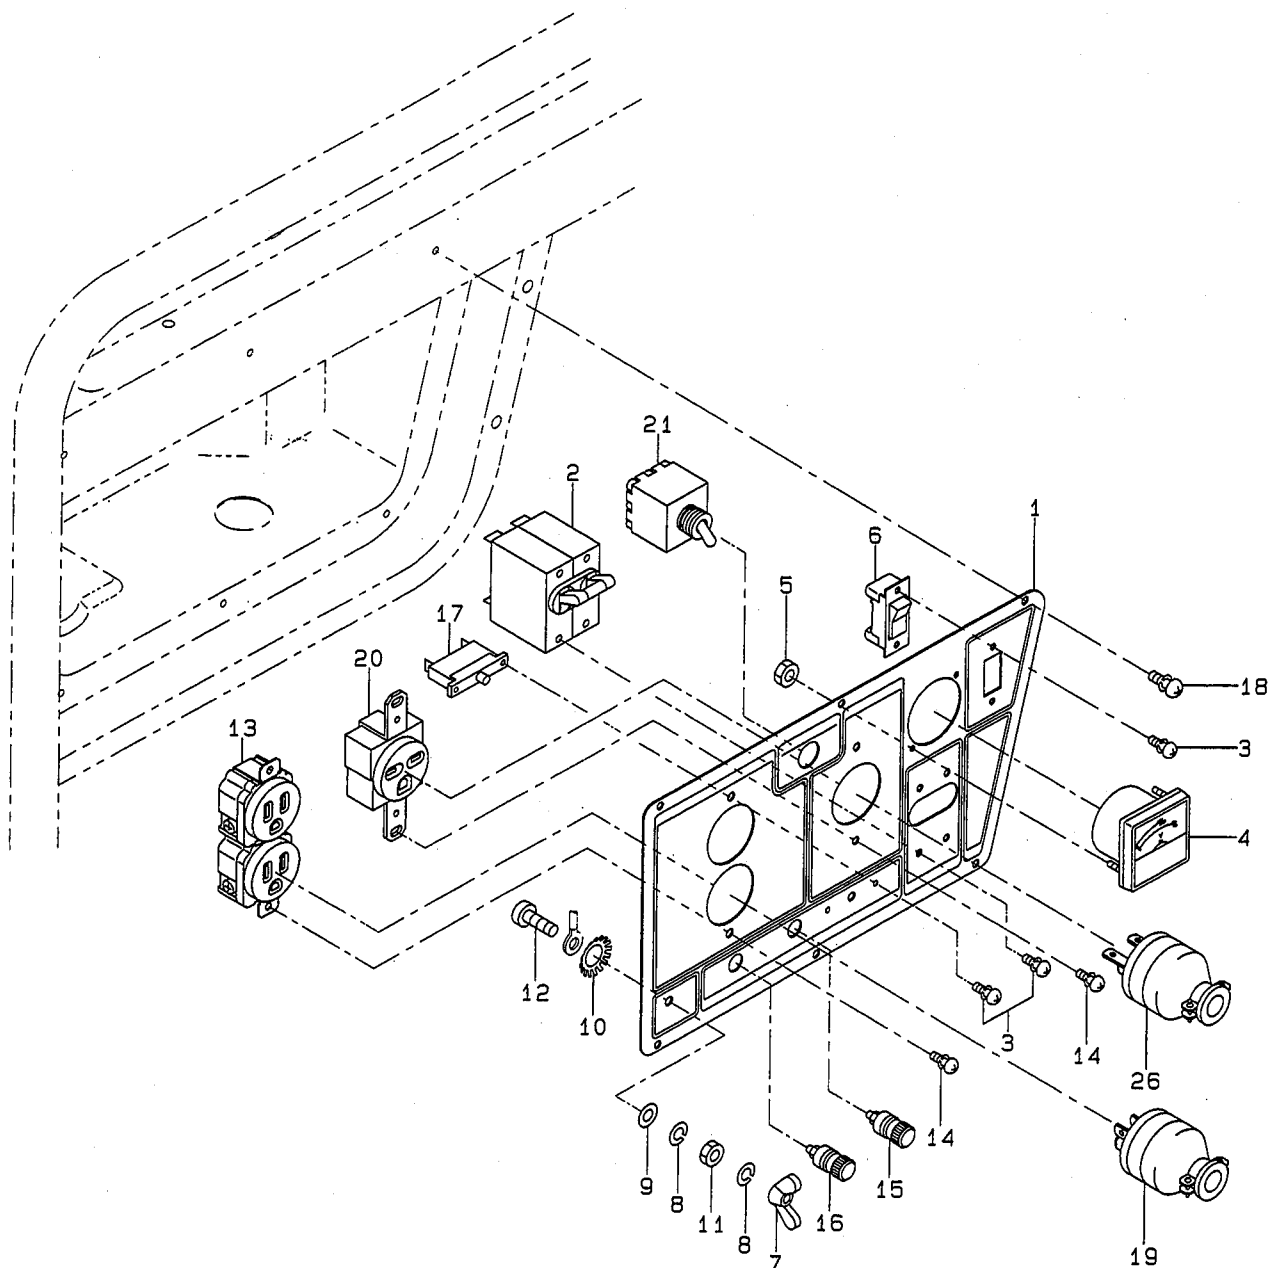

↪ Interchangeability

- 14 -

FIG.4-5 CONTROL PANEL (GERMANY, 50Hz-220V)


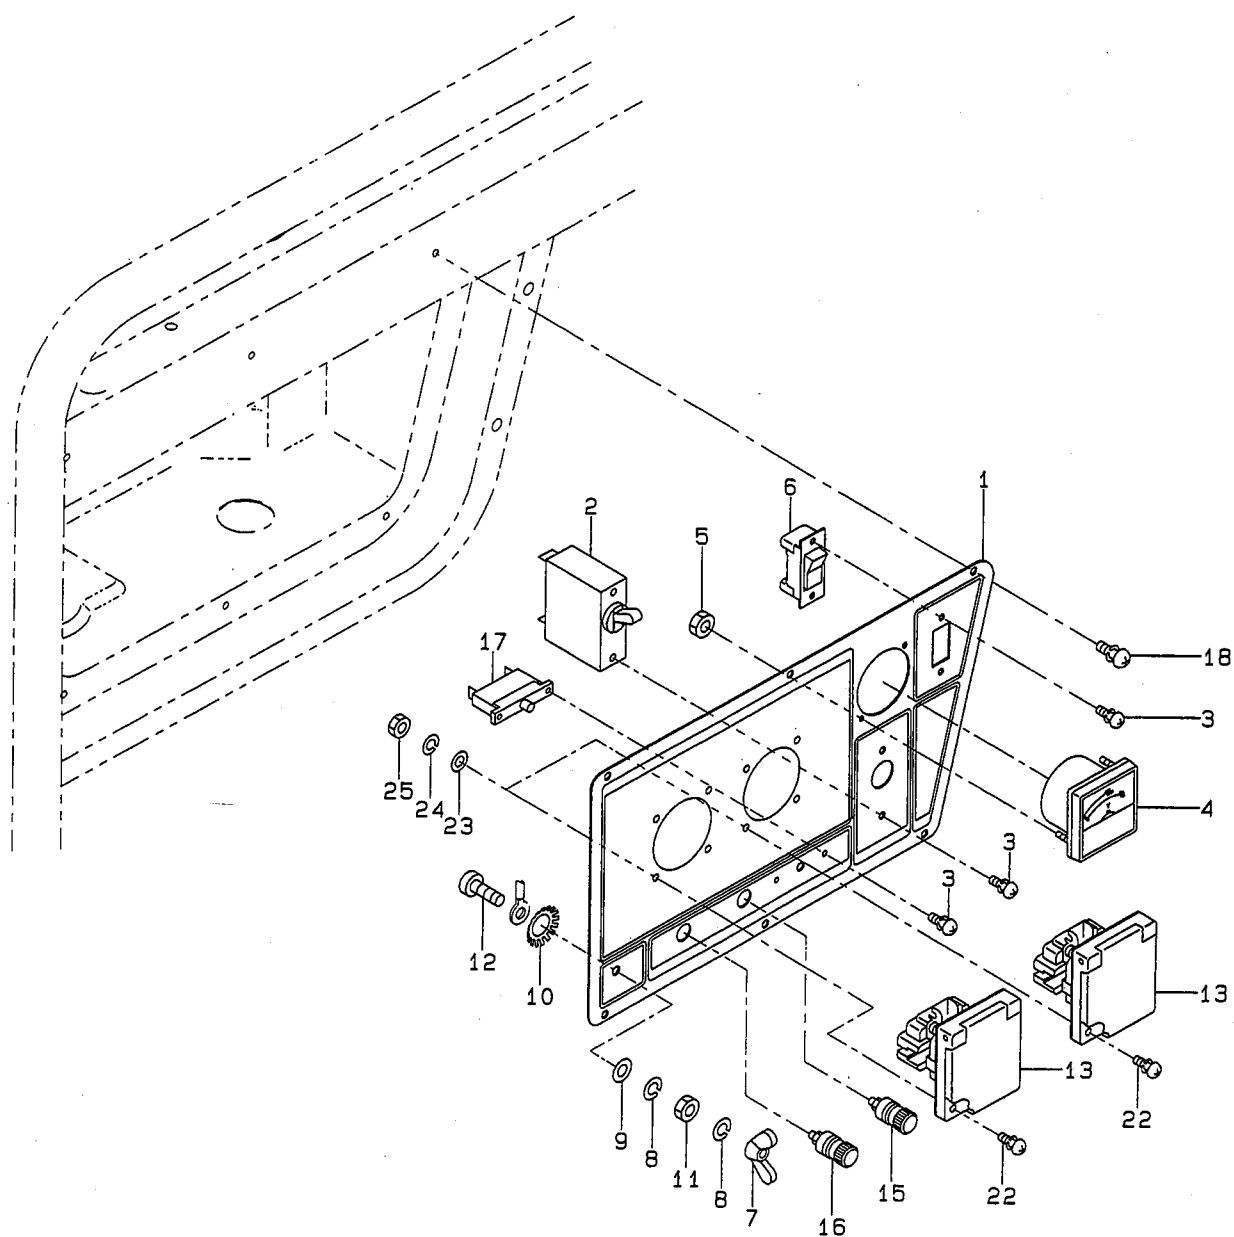


FIG.4-5 CONTROL PANEL (GERMANY, 50Hz-220V)

↯Interchangeability

[illegible]


FIG.4-6 CONTROL PANEL (SOUTH AFRICA, 50Hz-220V)

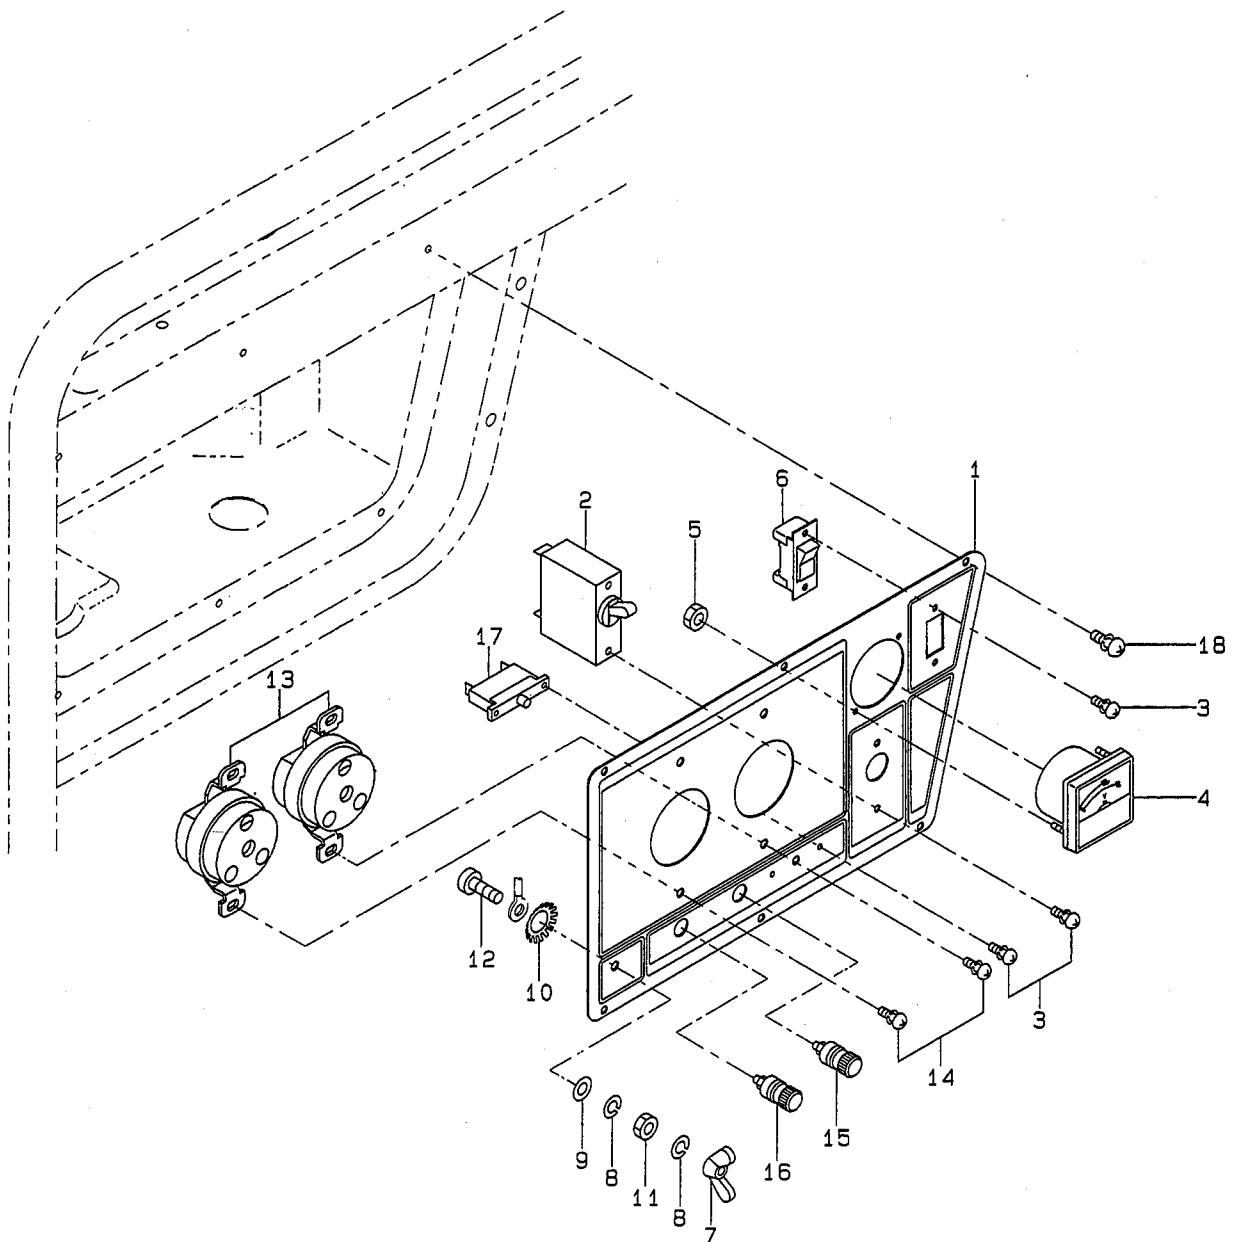

↪ Interchangeability

- 18 -


FIG.4-7 CONTROL PANEL (GERMANY, 50Hz-230V) (CE spec.)

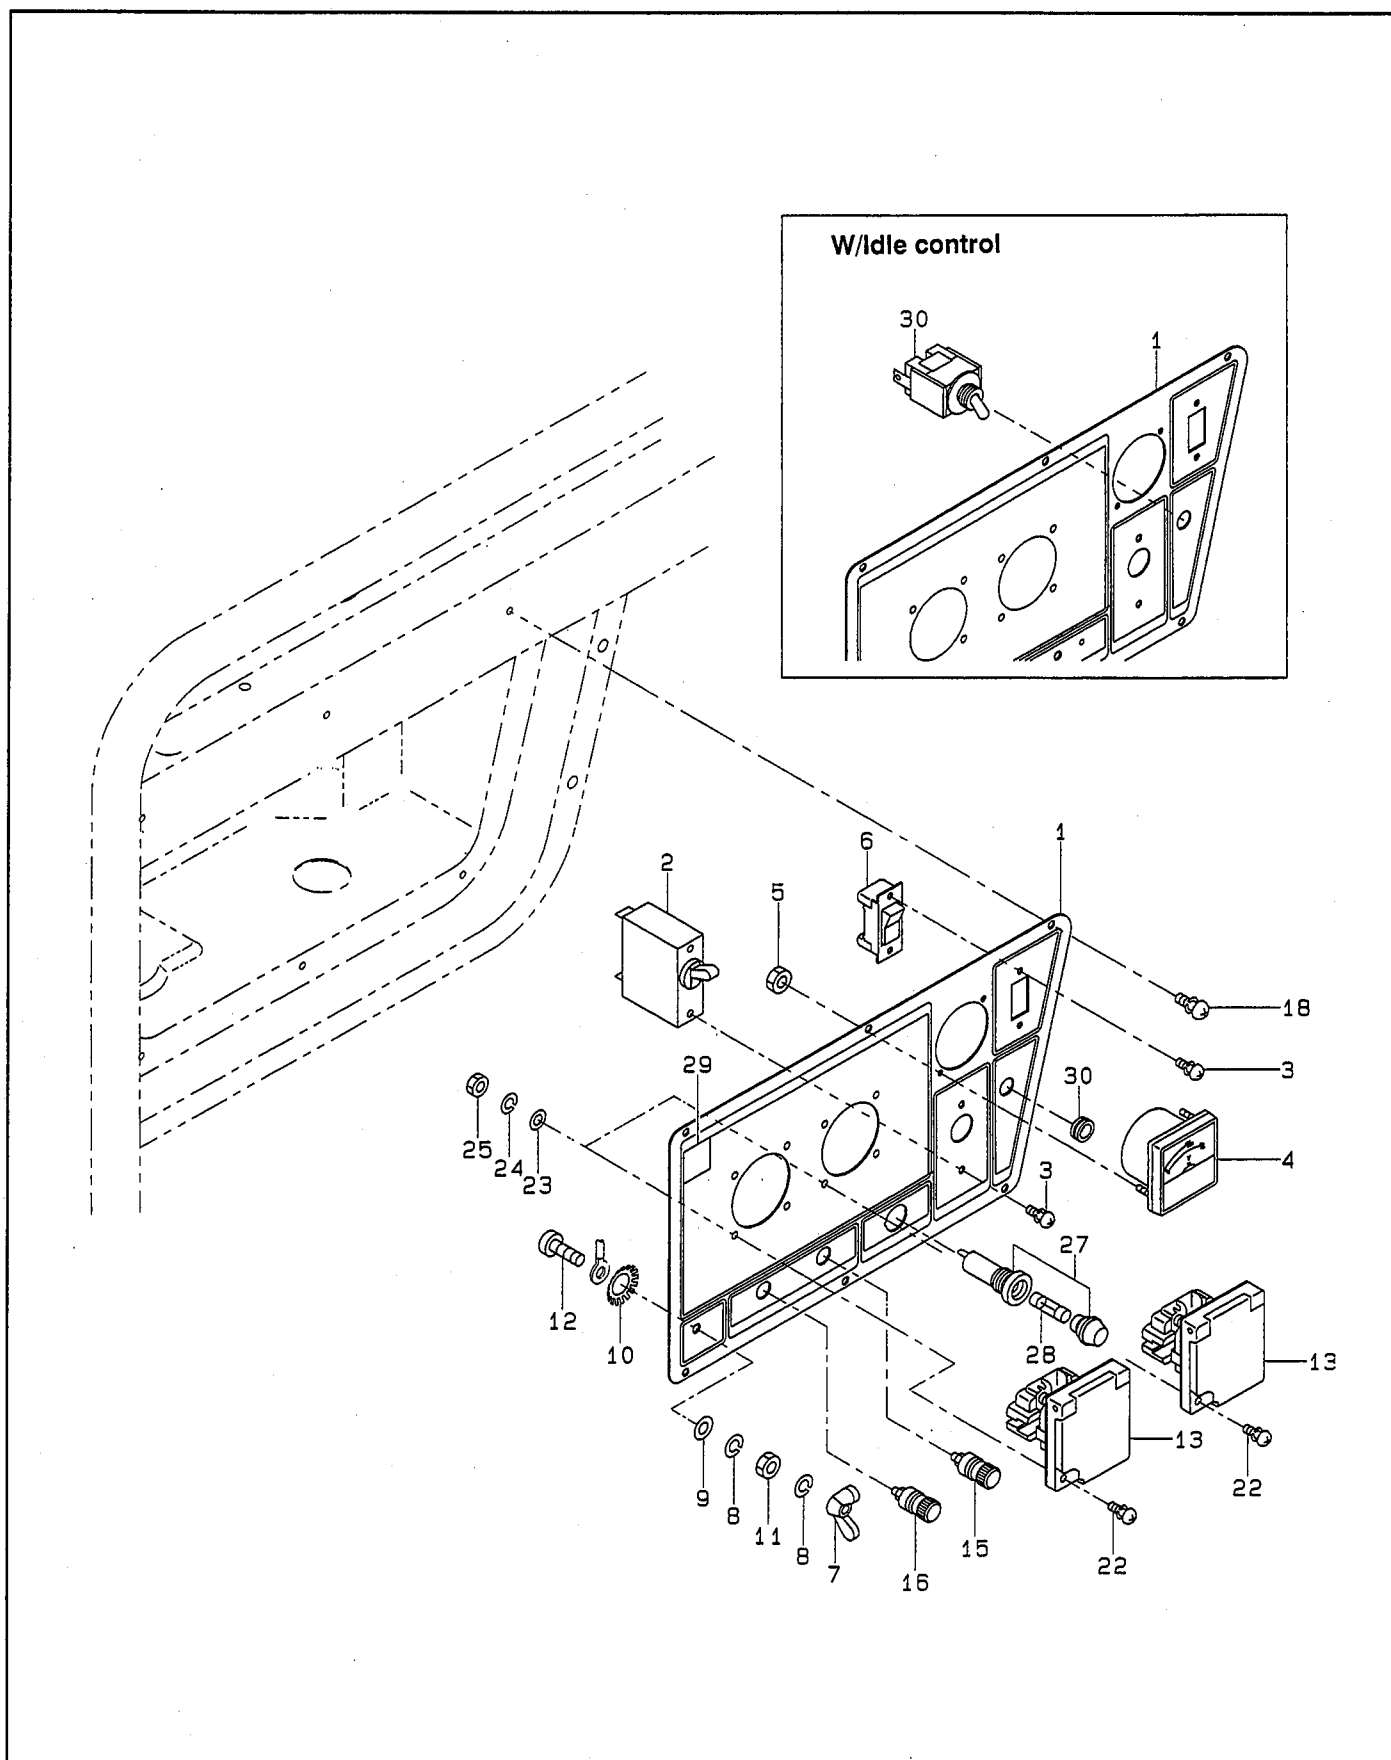

↯ Interchangeability

—20—


FIG.4-8 CONTROL PANEL (FRANCE, 50Hz-230V) (CE spec.)

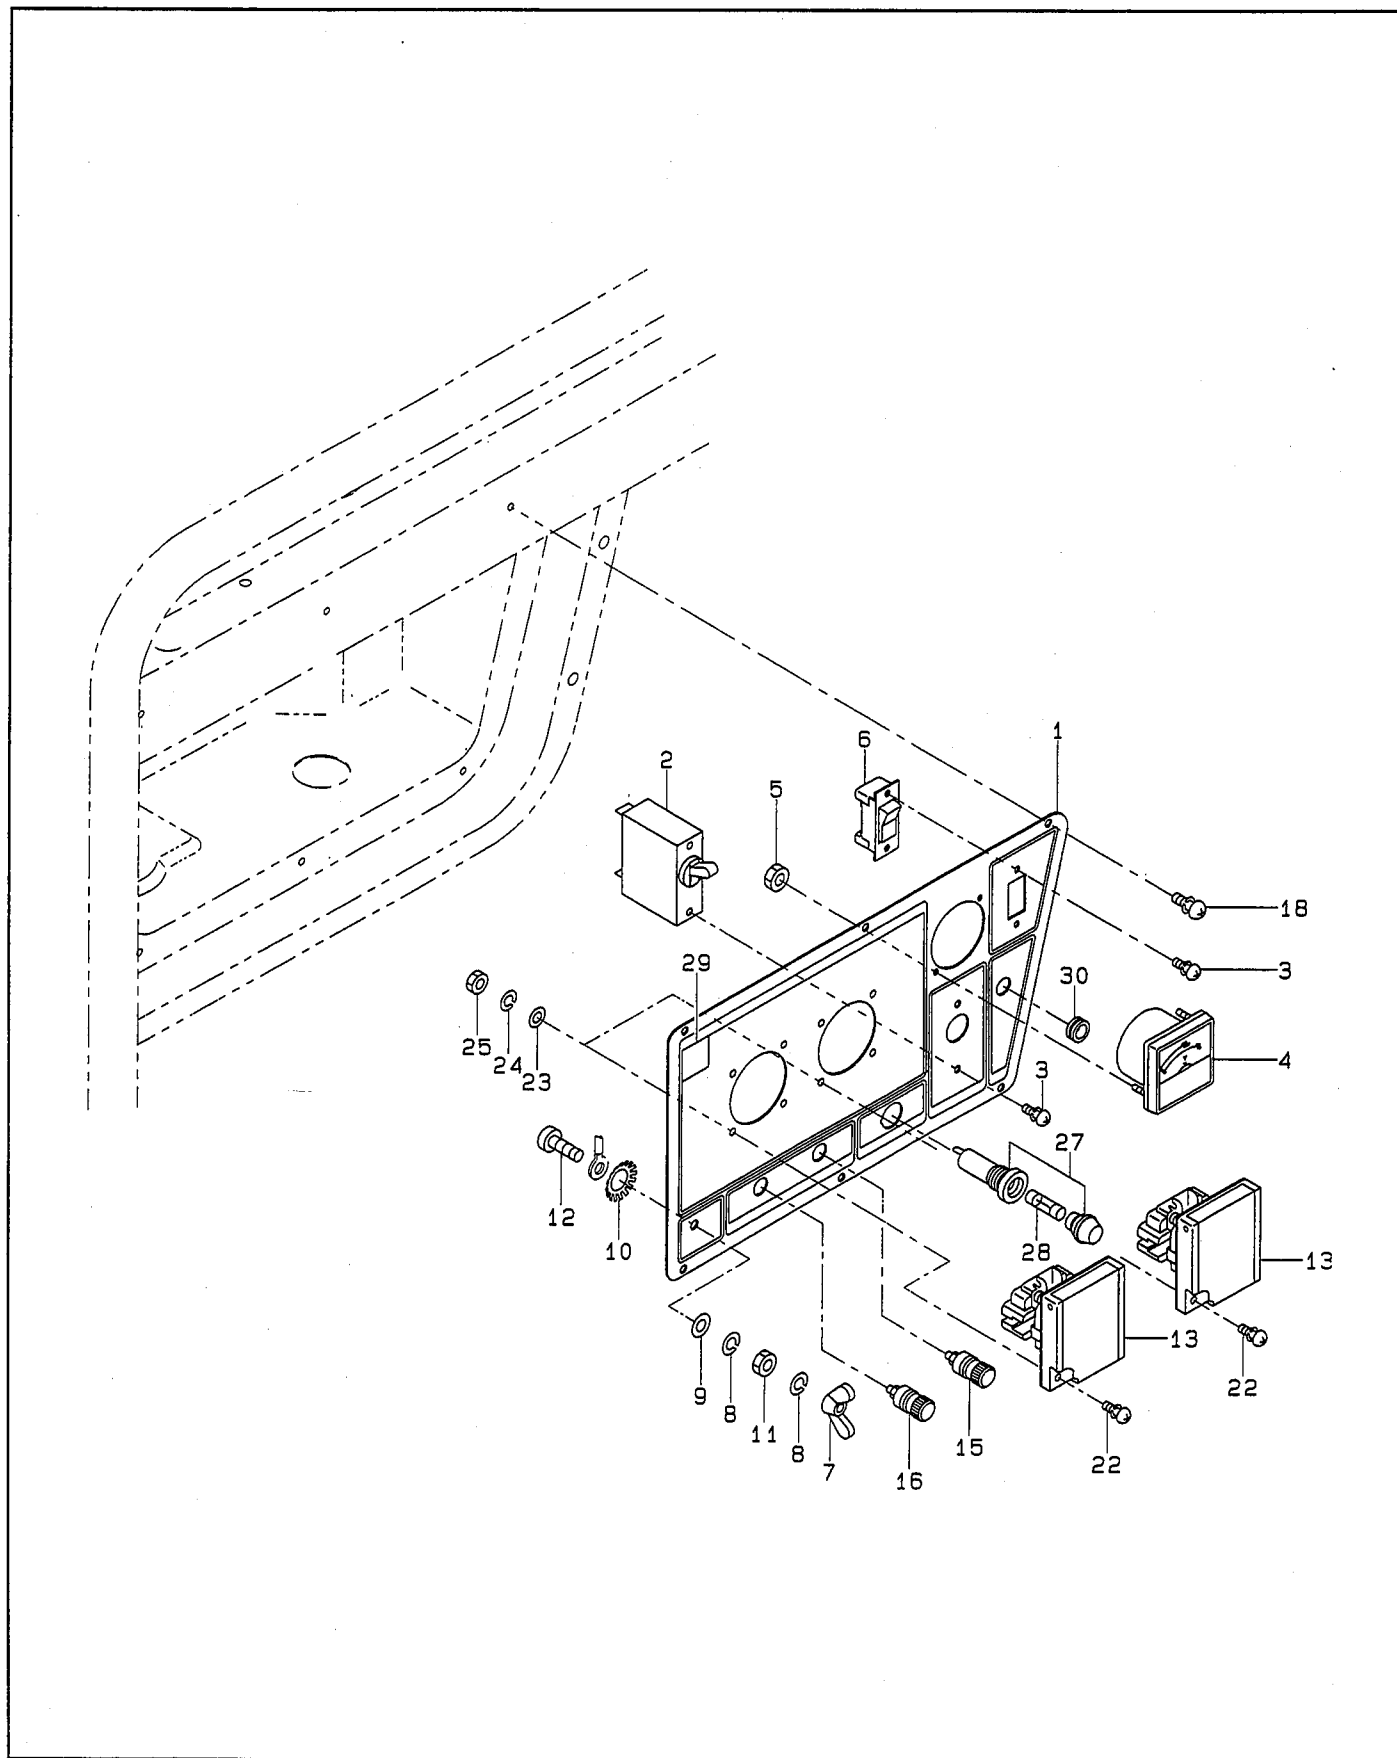

↯ Interchangeability

-22-

FIG.4-9 CONTROL PANEL (U.K., 50Hz-115V/230V, BS) (CE spec.)

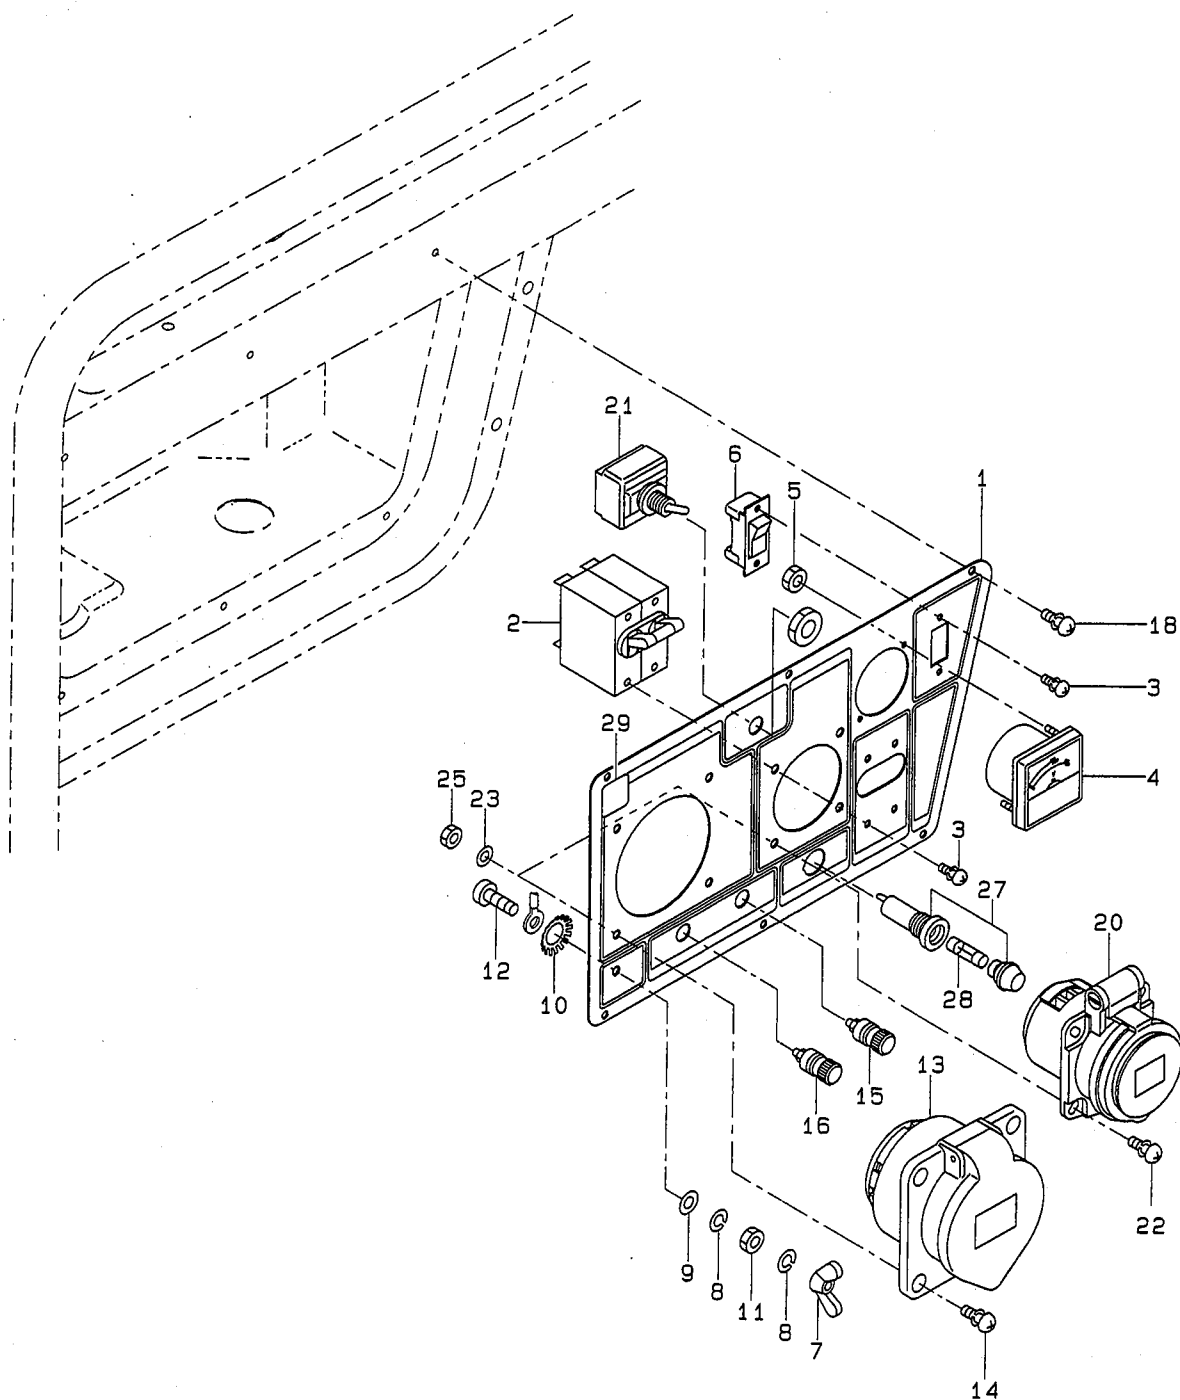

↪ Interchangeability

-24-

FIG.5 FUEL TANK

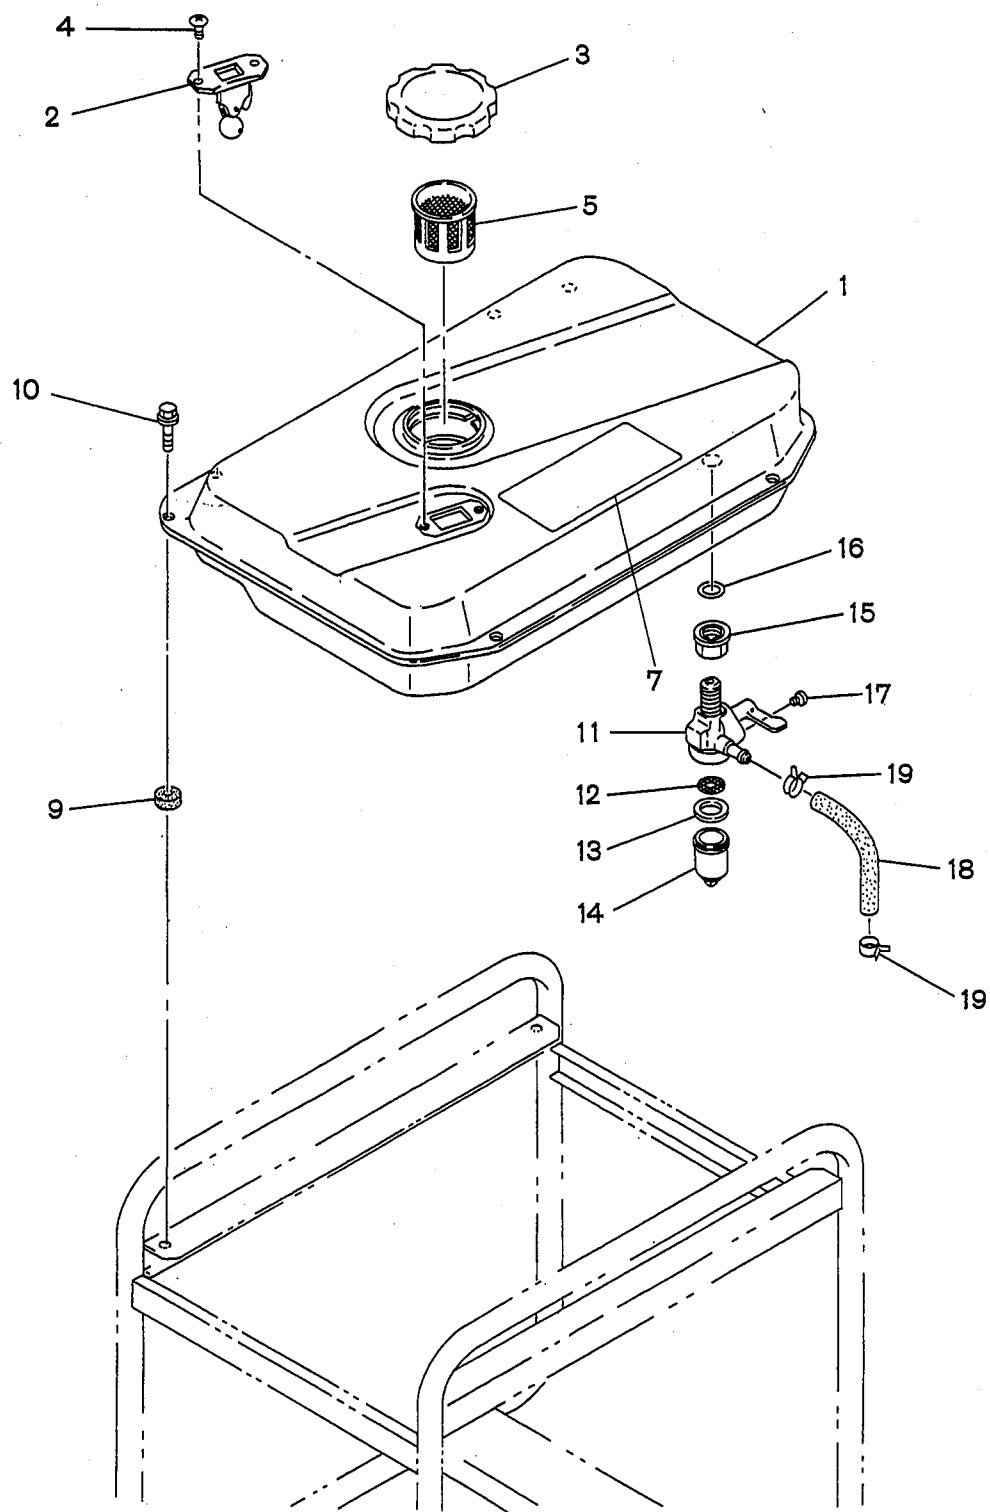


FIG.5 FUEL TANK

↯ Interchangeability

[illegible]

FIG.6 MUFFLER

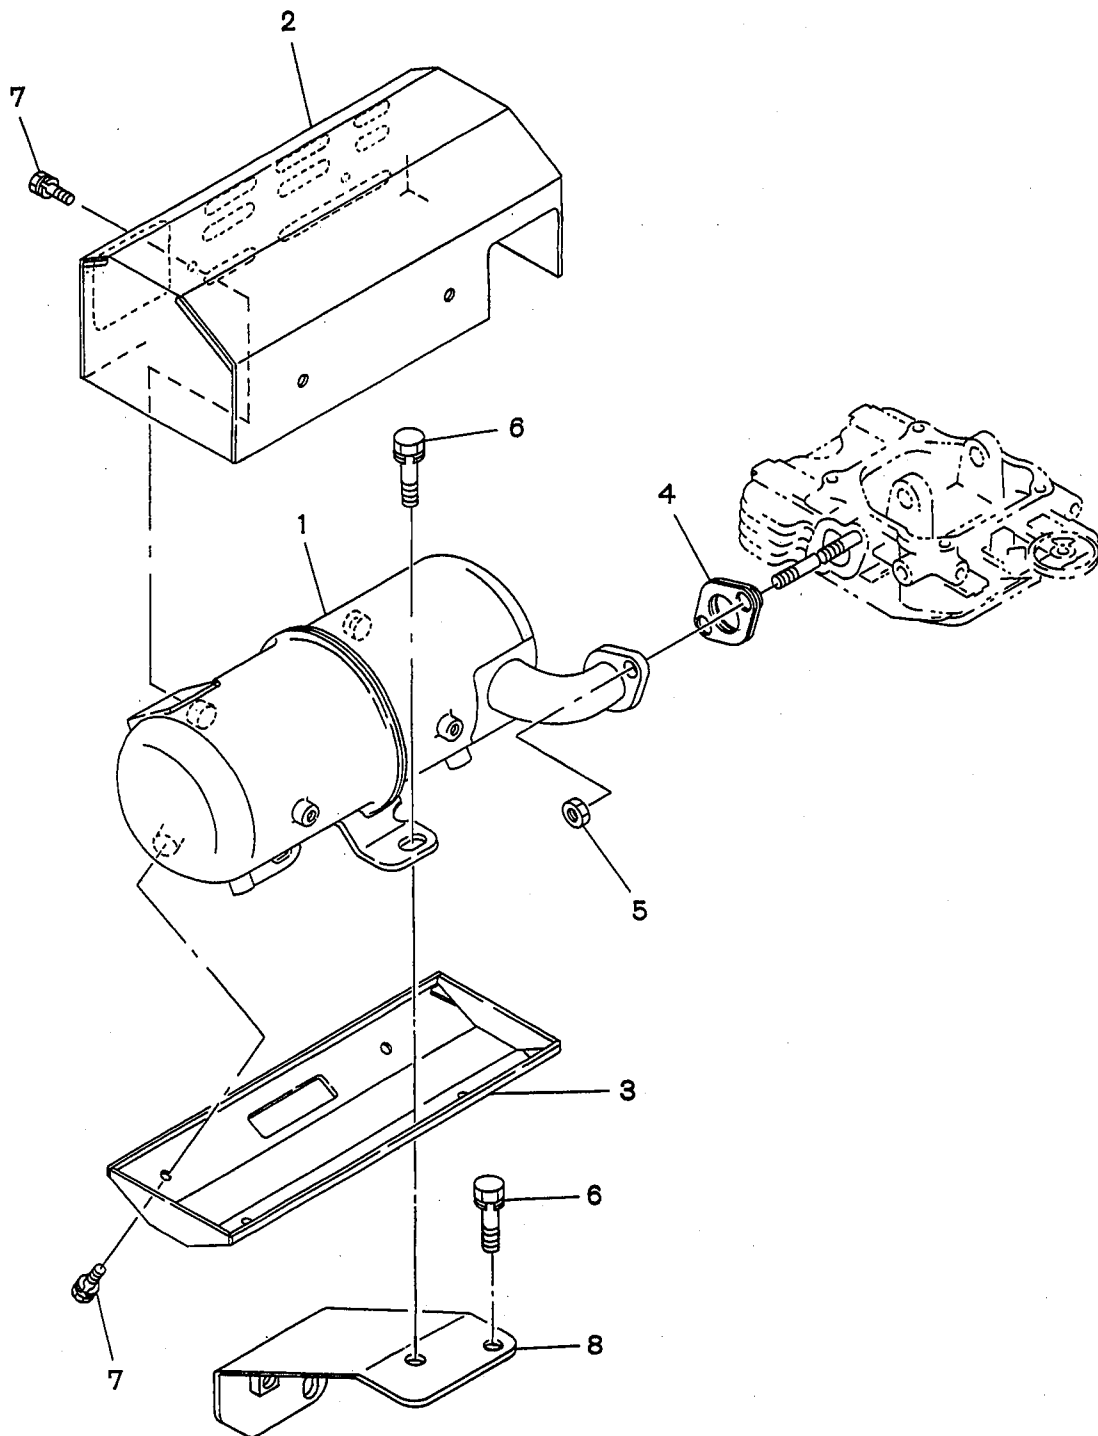


FIG.6 MUFFLER

↯ Interchangeability

[illegible]

FIG.7A CRANKCASE (EH17)

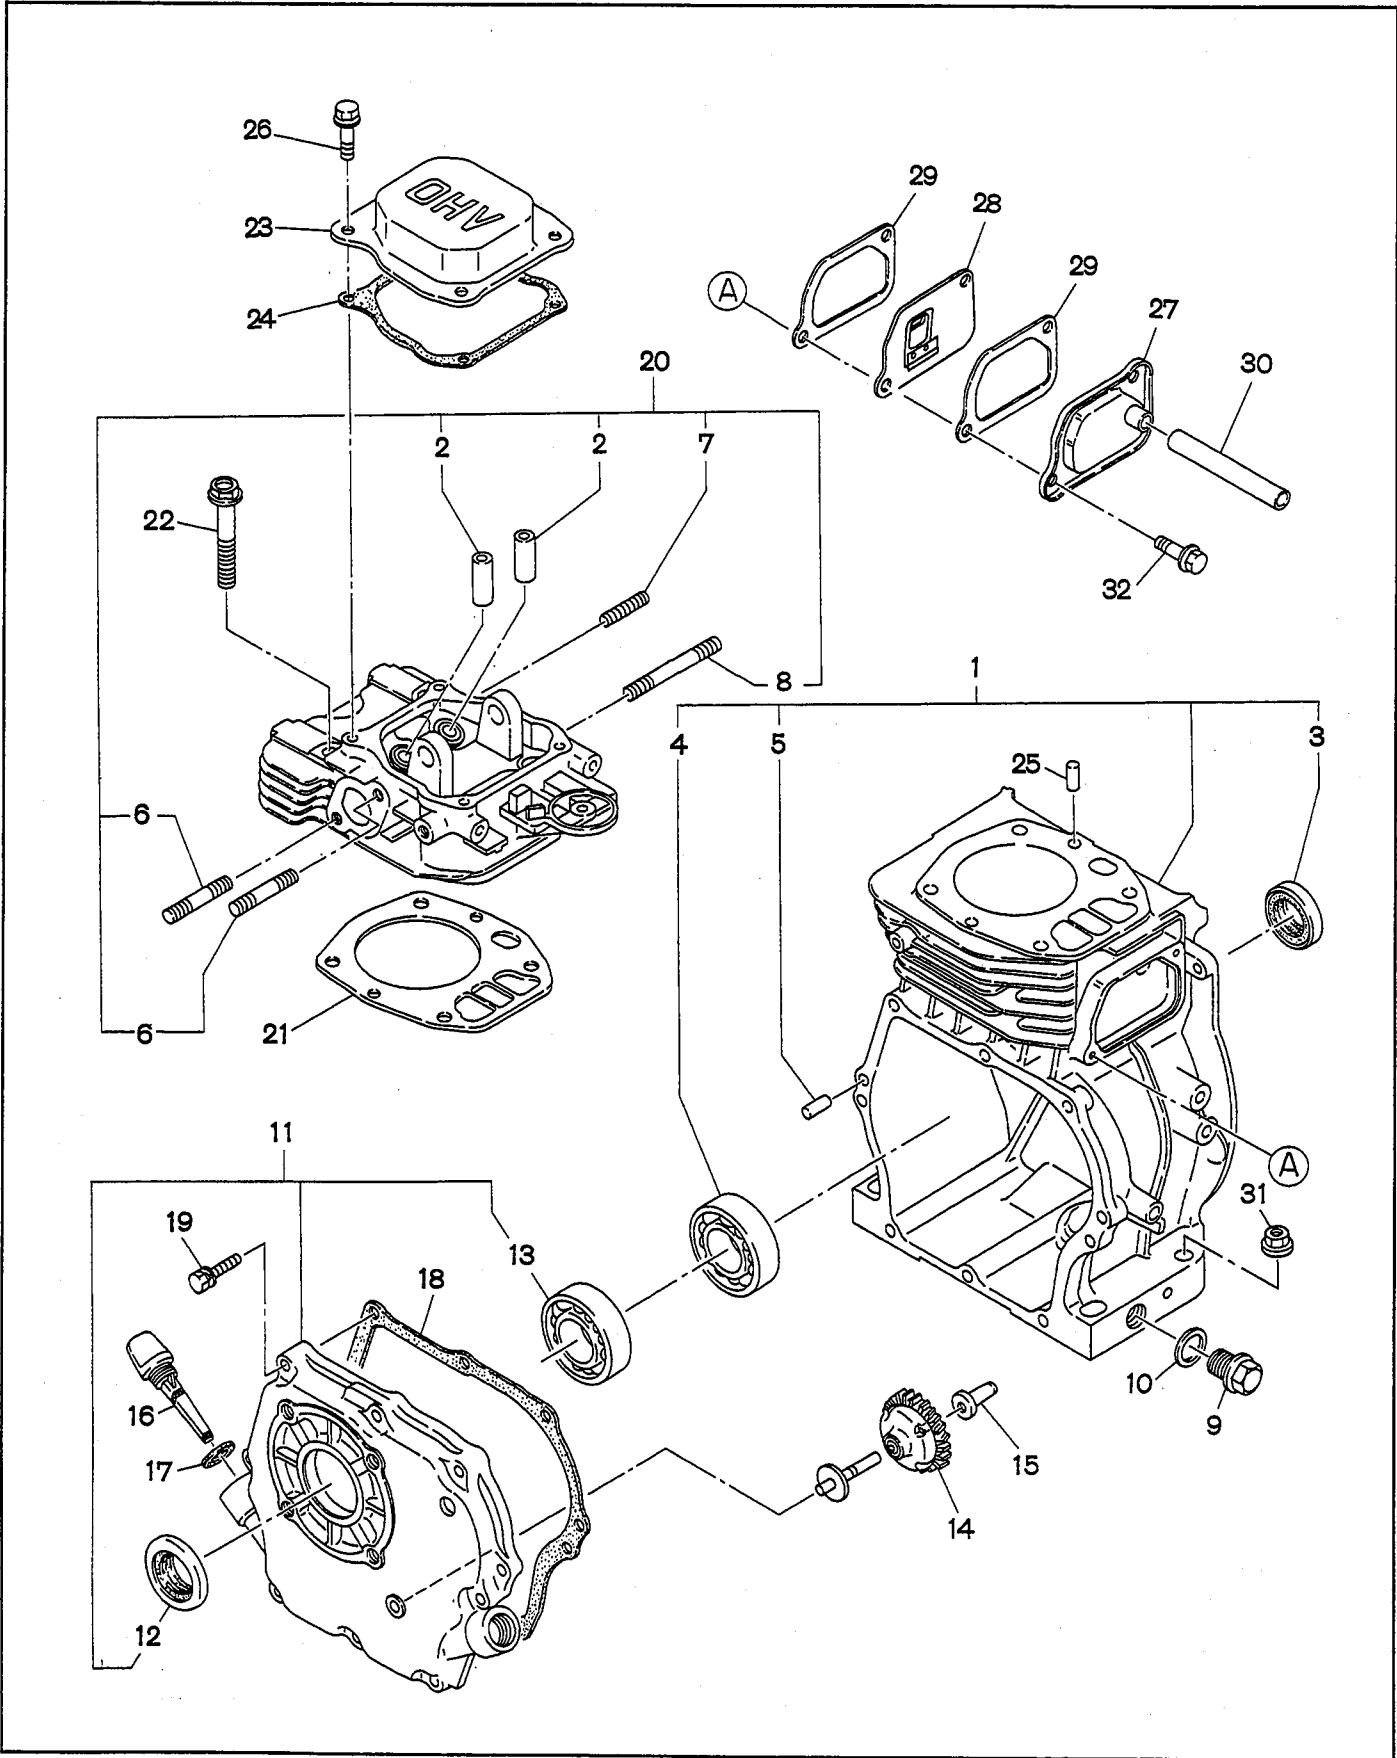


FIG.7A CRANKCASE (EH17)

↯ Interchangeability

[illegible]

FIG.7B CRANKCASE (EH17-2)


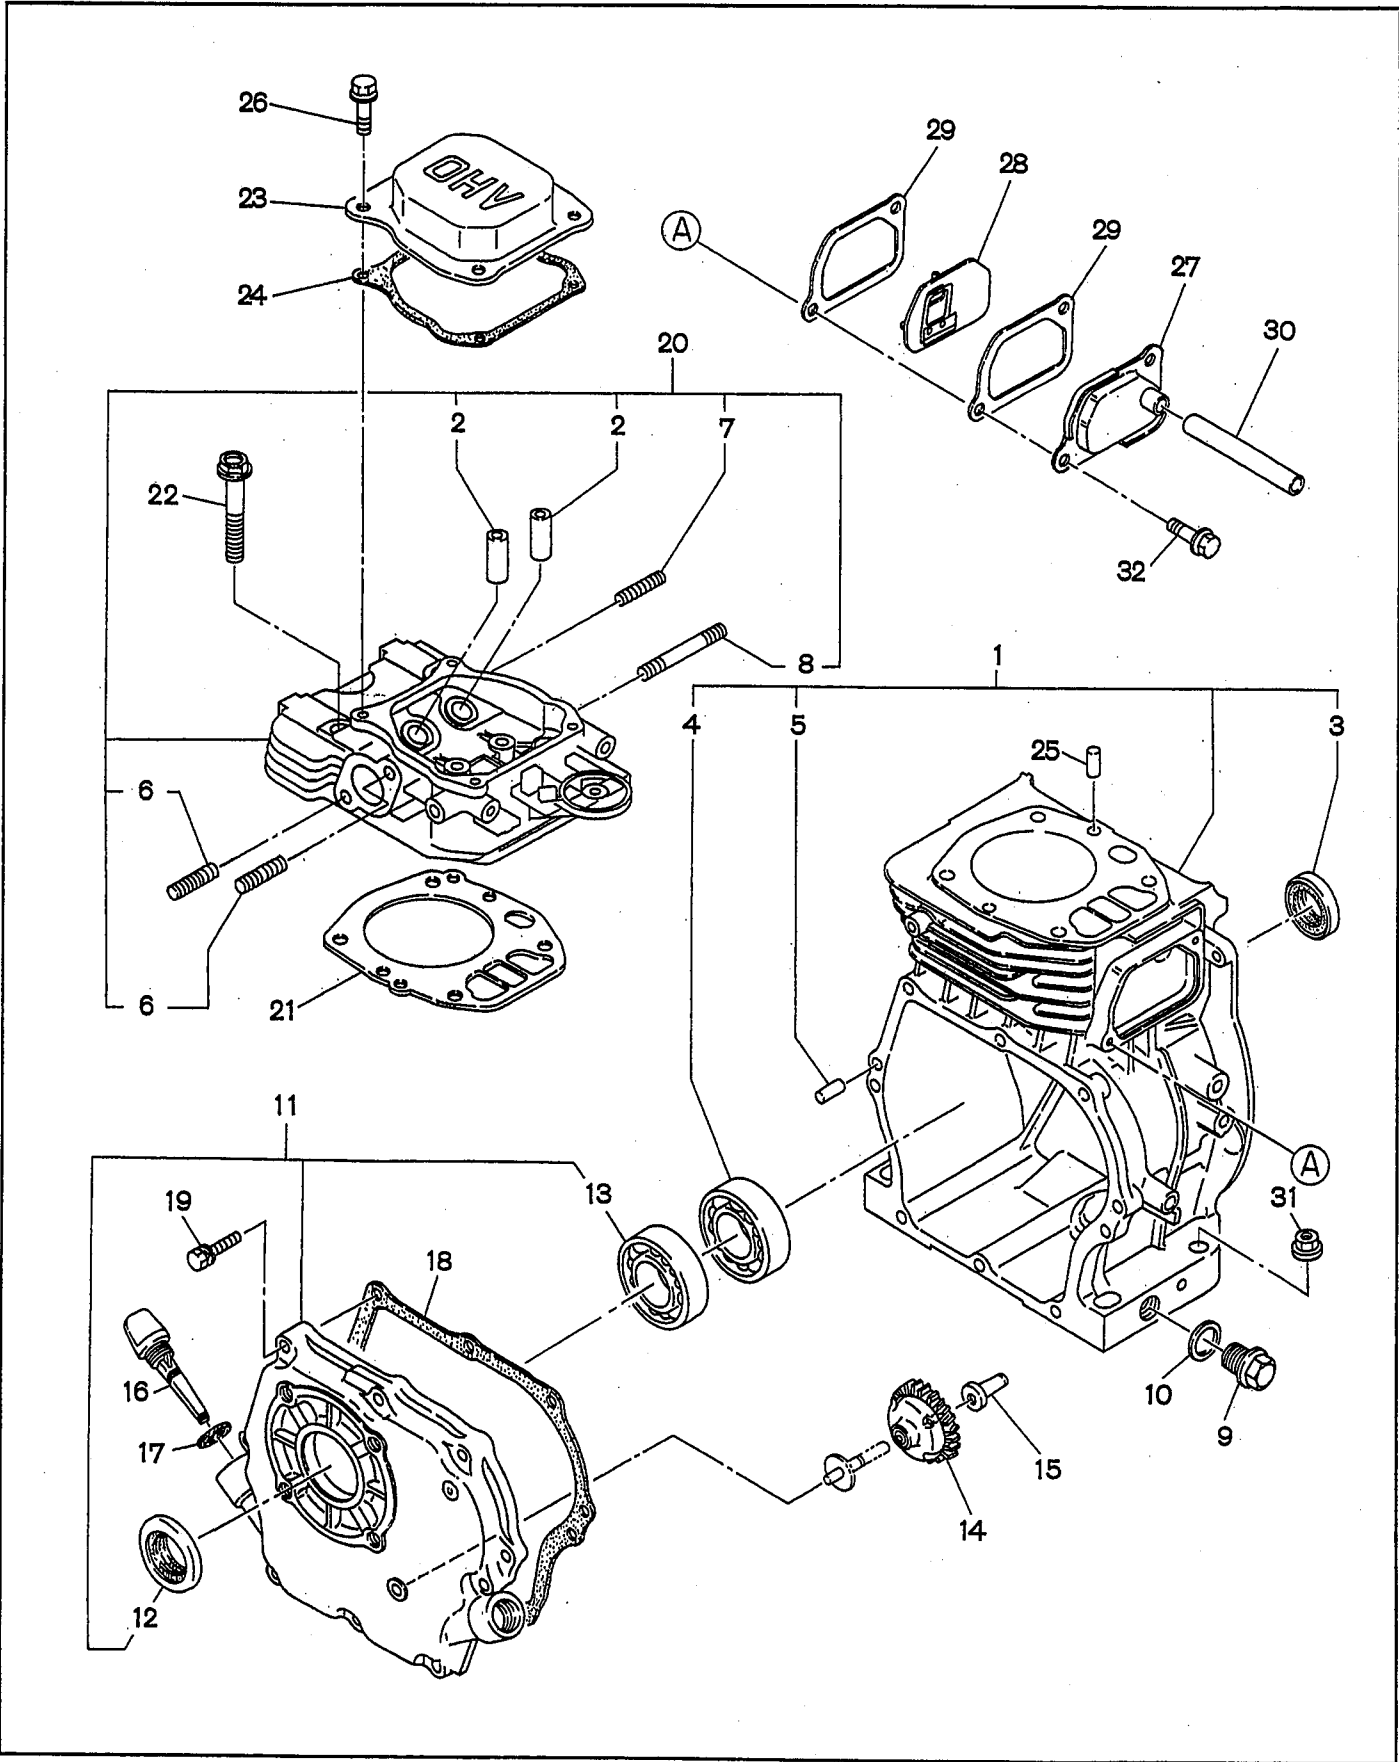


FIG.7B CRANKCASE (EH17-2)

				↙Interchangeability	
Ref. No.	Part Number	Description	Q'ty	Execution	
*1	269-10101-01	CRANKCASE, compl. Includes items 3 thru 5 W/O Idle control type	1		
*1	269-10104-01	CRANKCASE, compl. Includes items 3 thru 5 W/Idle control type	1		
2	237-14202-03	VALVE GUIDE (OVER SIZE)	2		
3	044-02500-70	OIL SEAL ($\phi 25 \times \phi 38 \times 7\text{mm}$)	1		
4	060-02500-10	BALL BEARING (BB6205C3)	1		
5	031-00600-20	DOWEL PIN	2		
6	010-50802-90	STUD	2		
7	010-50601-31	STUD	1		
8	001-39066-00	STUD	1		
9	040-11400-30	PLUG	2		
10	021-11400-20	GASKET	2		
*11	253-11013-01	MAIN BEARING COVER, compl. Includes items 12 and 13	1		
12	044-02501-60	OIL SEAL ($\phi 25 \times \phi 41.24 \times 7\text{mm}$)	1		
13	060-02500-10	BALL BEARING (BB6205C3)	1		
14	227-45003-01	GOVERNOR GEAR, compl.	1		
15	205-41901-03	GOVERNOR SLEEVE	1		
16	269-63601-03	OIL GAUGE	1		
17	021-31600-20	GASKET	1		
18	253-16002-03	GASKET (bearing cover)	1		
19	013-00600-40	BOLT and WASHER ASS'Y	8		
*20	269-13001-01	CYLINDER HEAD, compl. Includes items 2 and 6 thru 8	1		
21	253-15001-23	GASKET (head)	1		
22	011-00801-00	FLANGE BOLT	4		
23	269-15503-03	ROCKER COVER	1		
23	253-15501-03	ROCKER COVER	1		
24	269-16004-03	GASKET (rocker cover)	1		
25	031-00600-20	DOWEL PIN	2		
26	011-00600-20	FLANGE BOLT	4		
27	253-14301-11	BREATHER COVER, compl.	1		
28	253-14401-11	BREATHER PLATE, compl.	1		
29	253-16006-33	GASKET (breather cover)	2		
30	085-10800-00	RUBBER PIPE ($\phi 8 \times \phi 11 \times 75\text{mm}$)	1		
31	002-38080-00	FLANGE NUT	2		
32	011-00600-30	FLANGE BOLT	2		
*	253-99001-07	GASKET SET (STD.)	1		


FIG.8A CRANKSHAFT and PISTON (EH17)

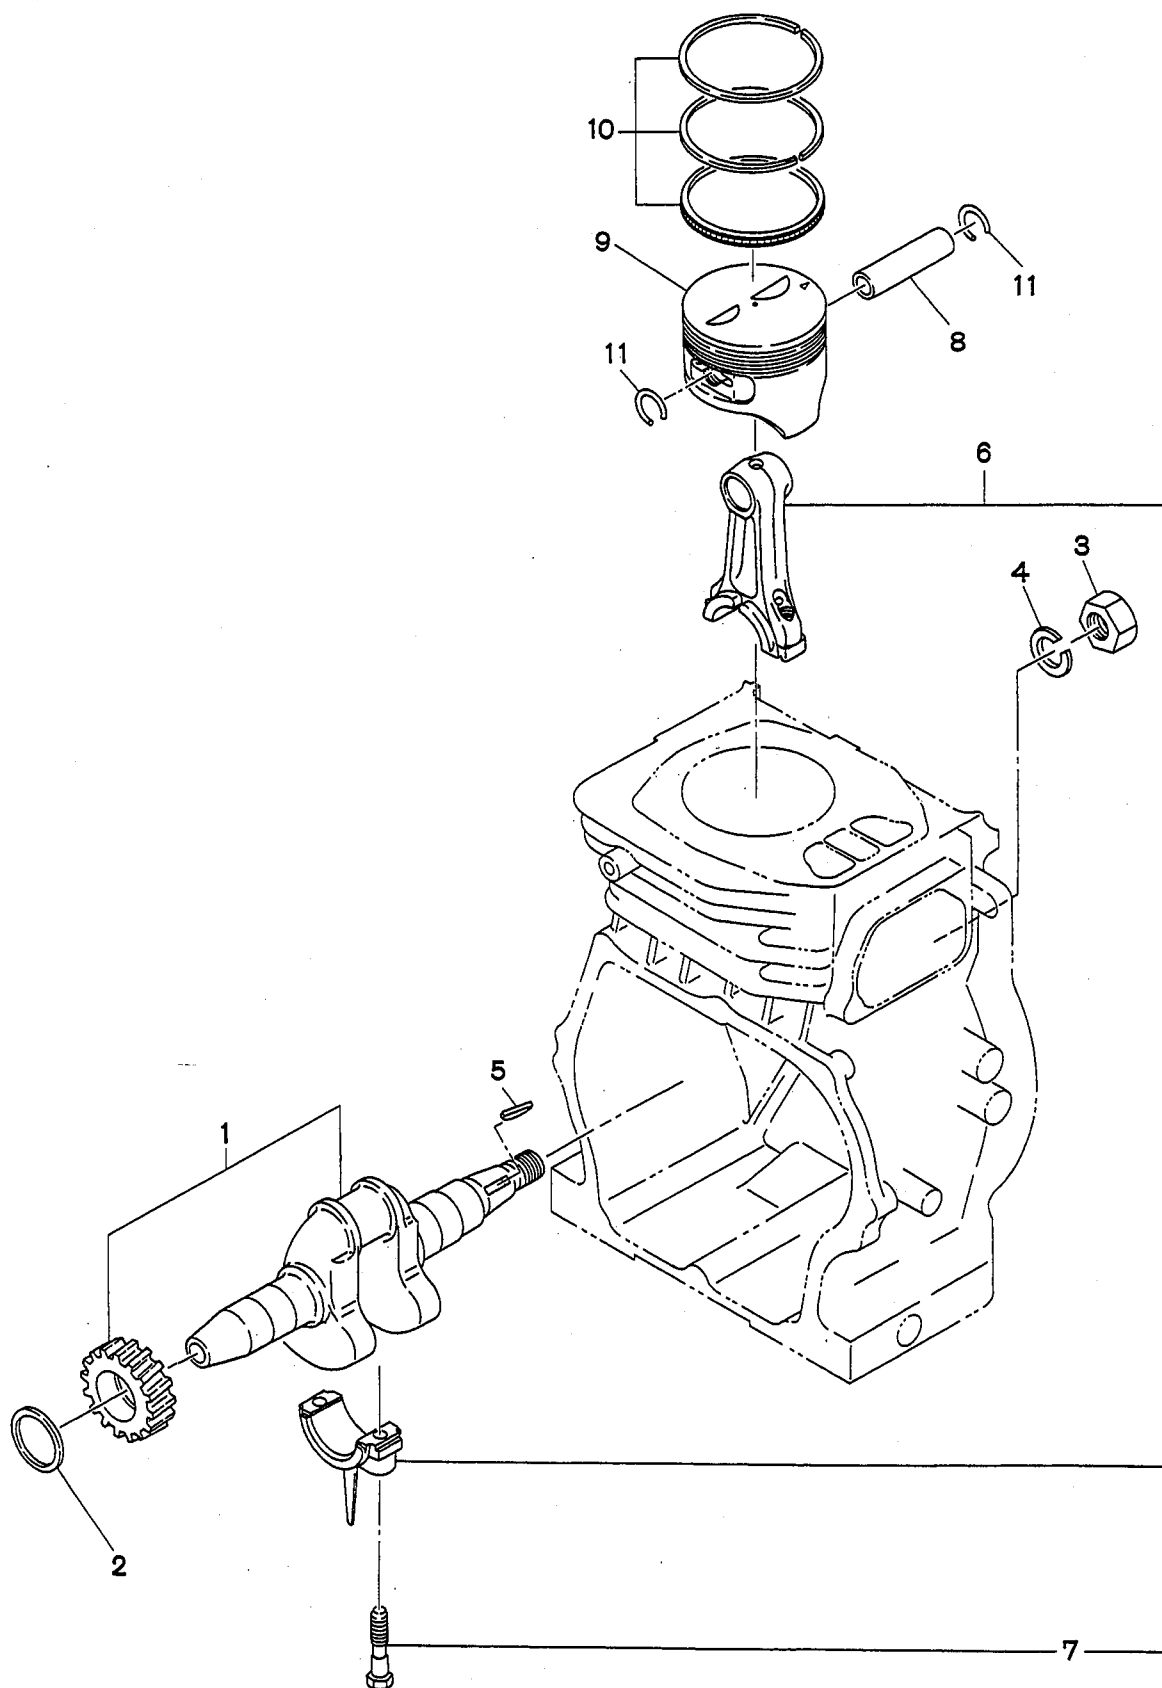

↯ Interchangeability

—34—


FIG.8B CRANKSHAFT and PISTON (EH17-2)

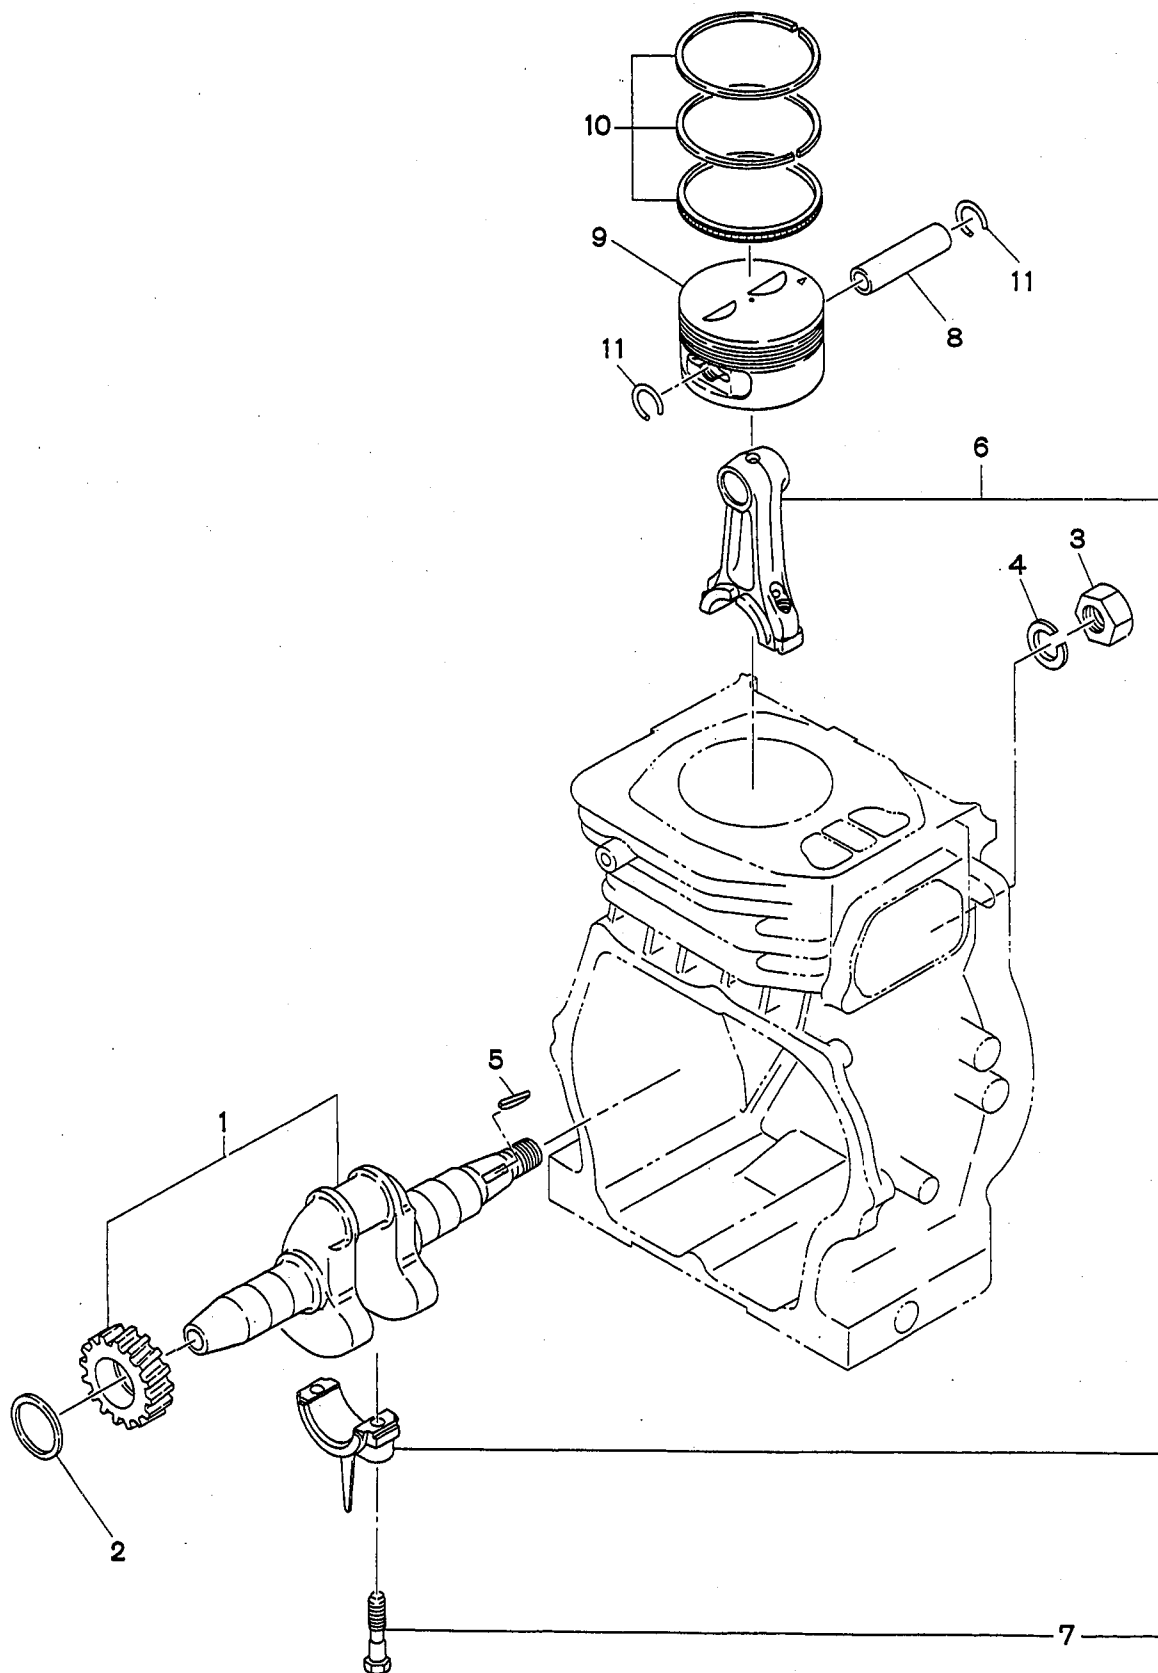

↪ Interchangeability

— 36 —


FIG.9A INTAKE and EXHAUST (EH17)

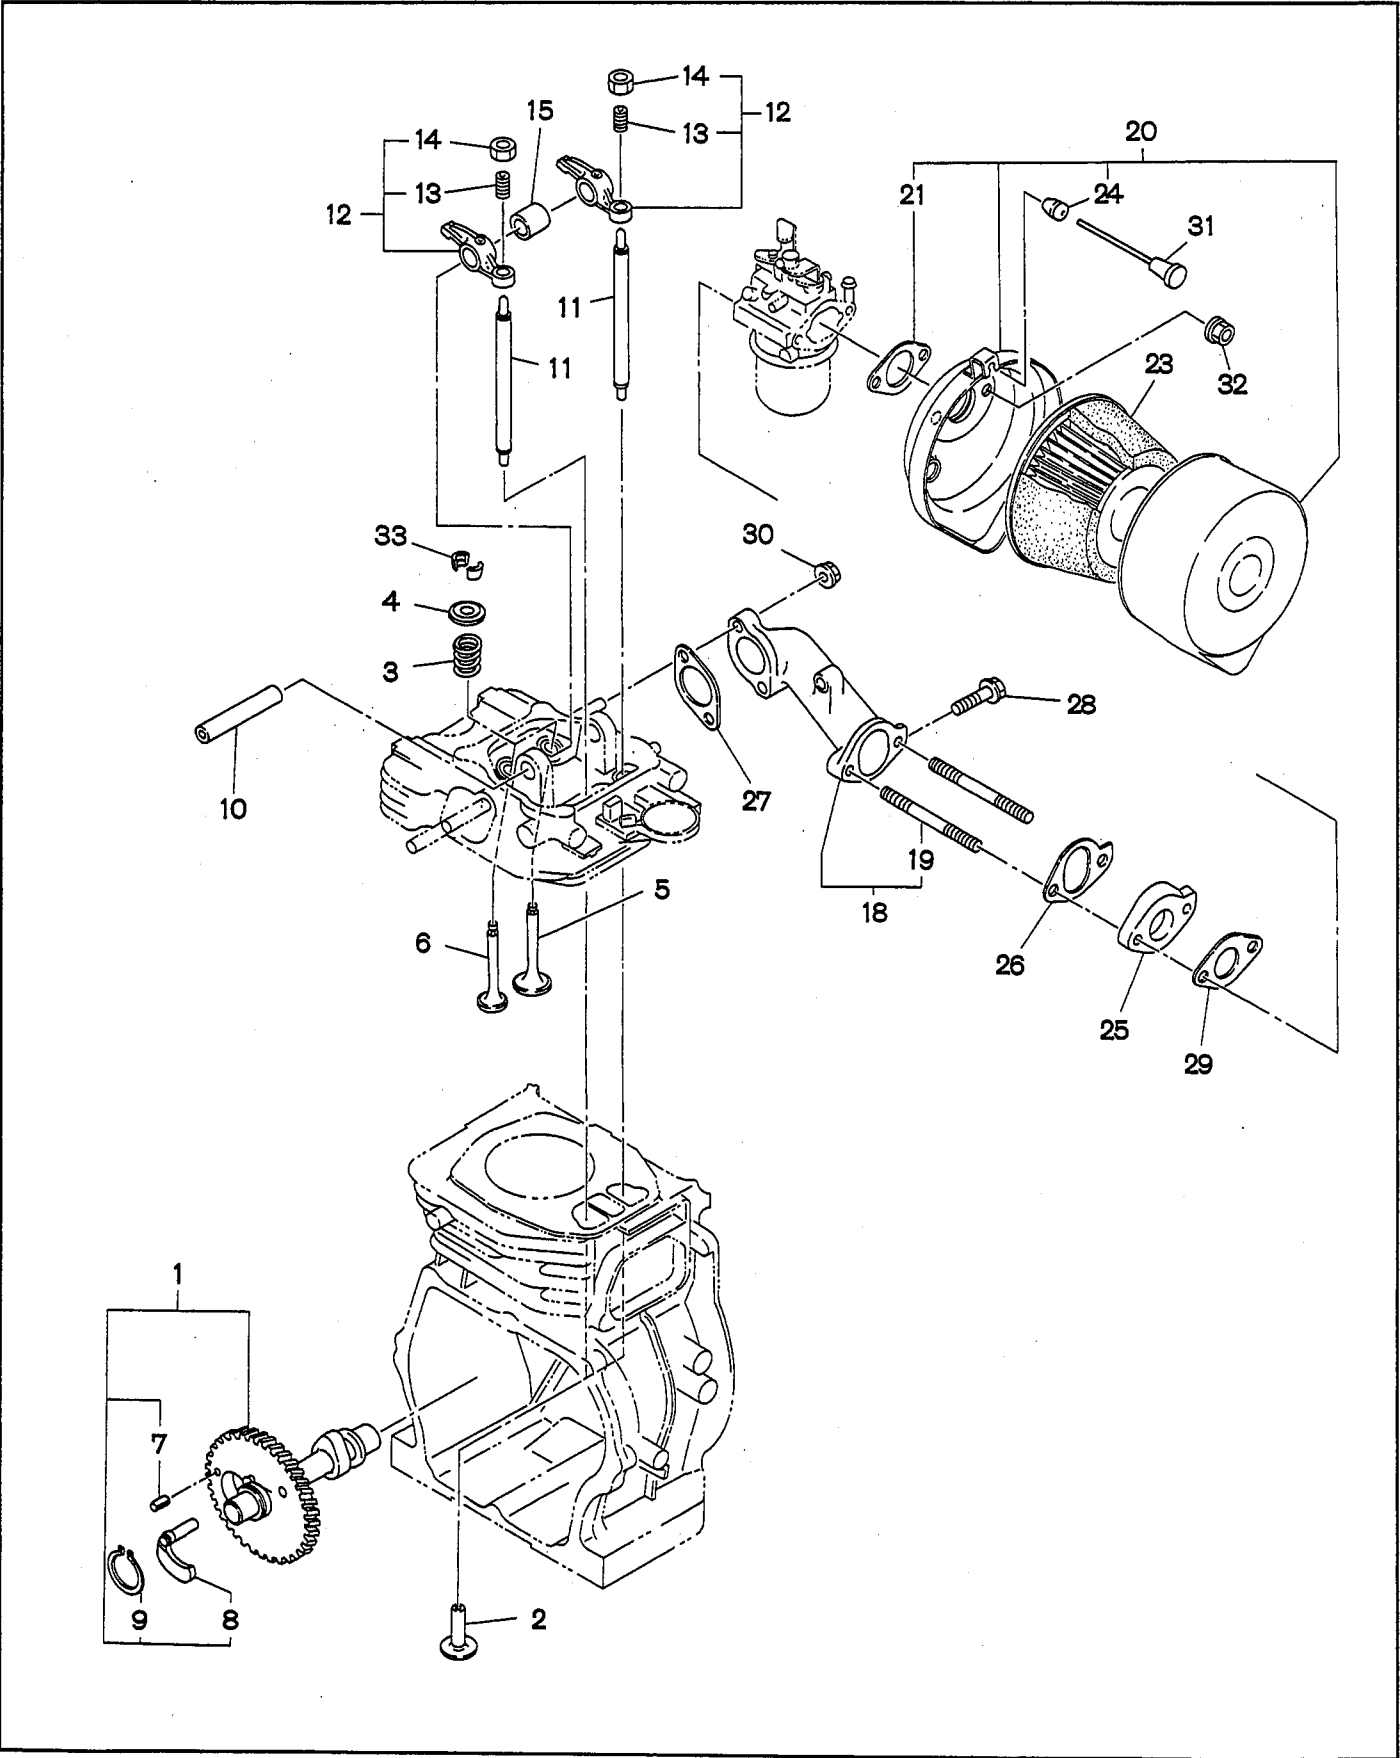

↯ Interchangeability


— 38 —

FIG.9B INTAKE and EXHAUST (EH17-2)

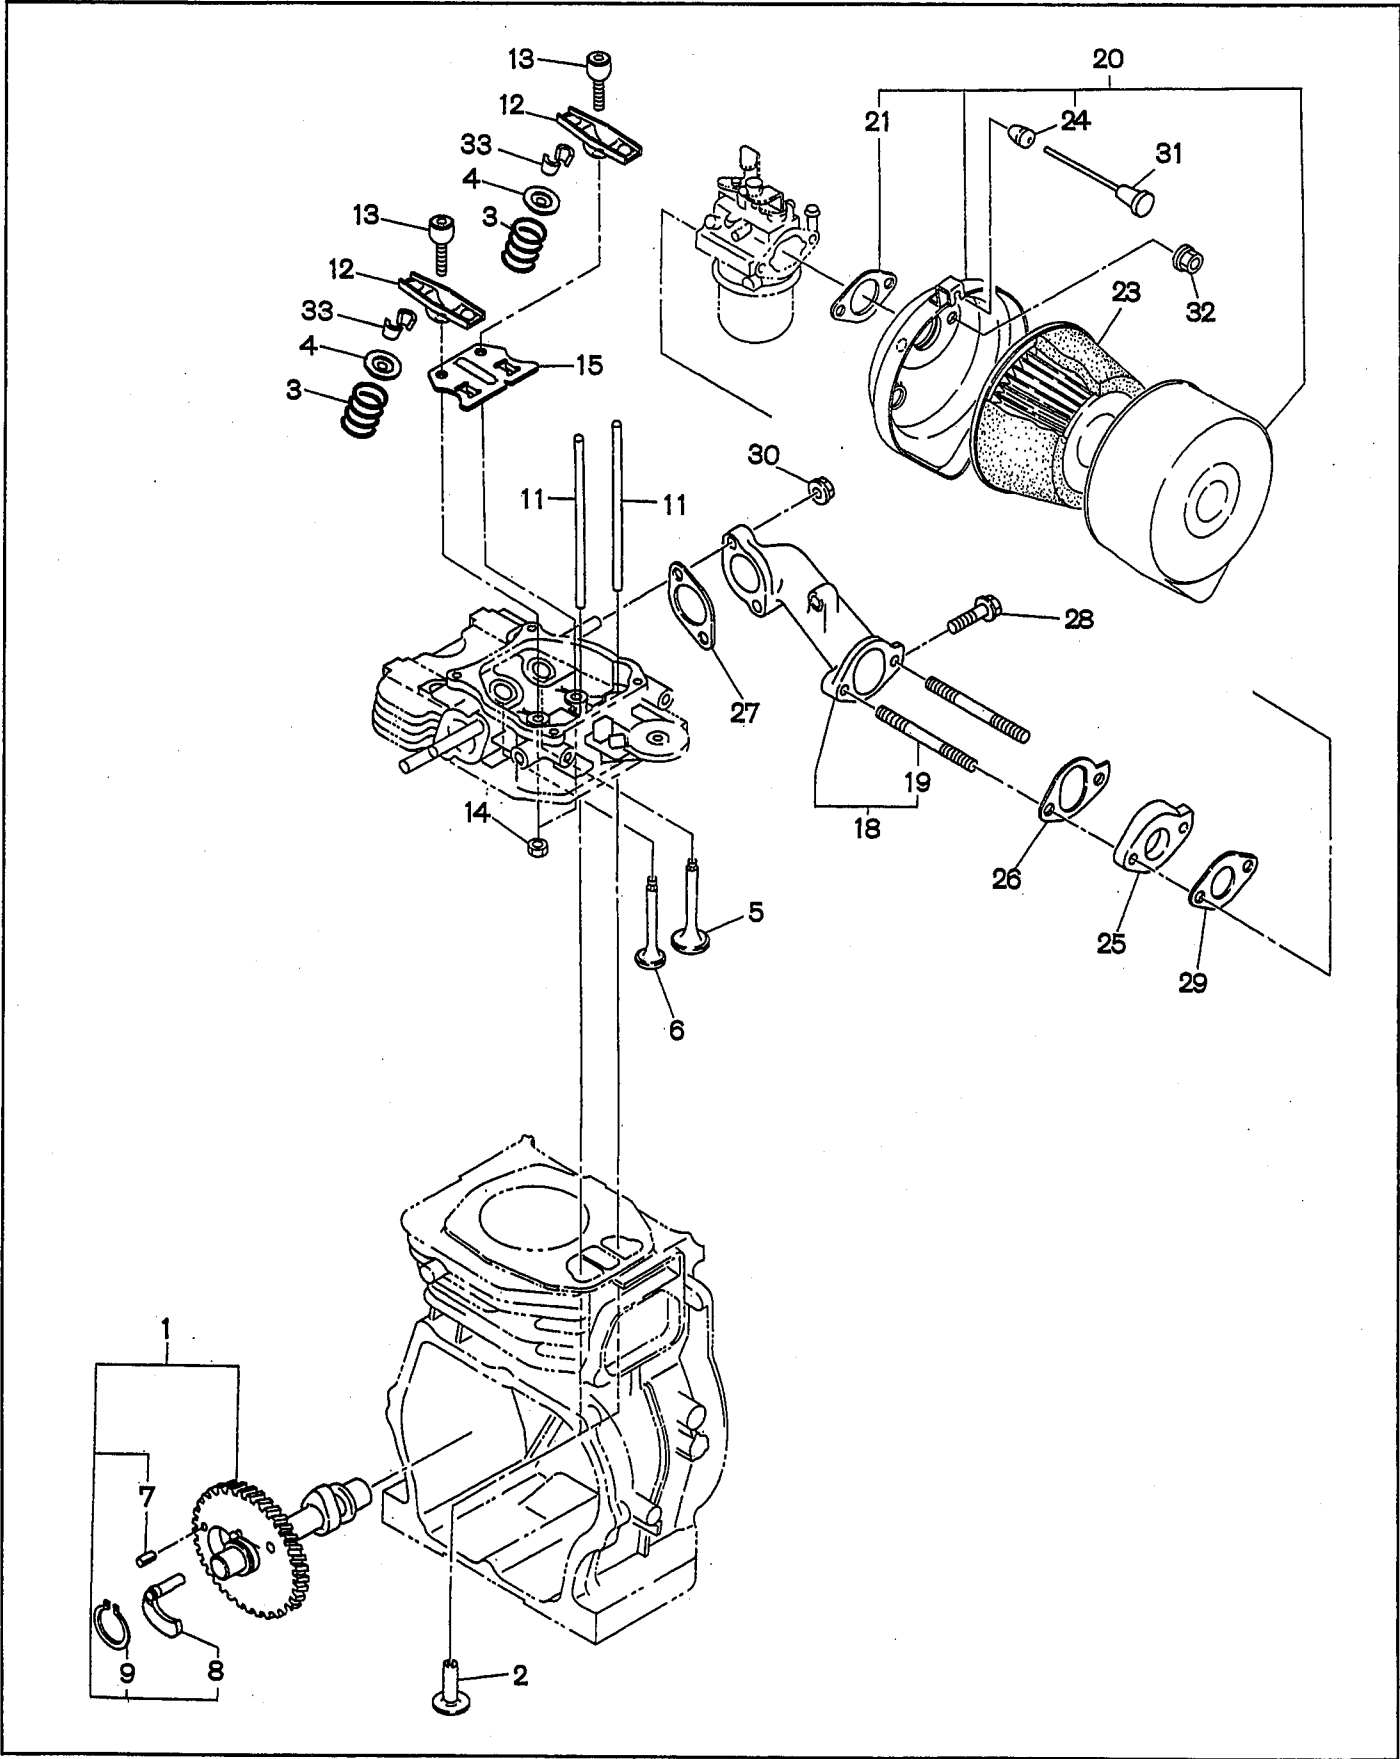

↪ Interchangeability

FIG.10 GOVERNOR, OPERATION (EH17 and EH17-2)

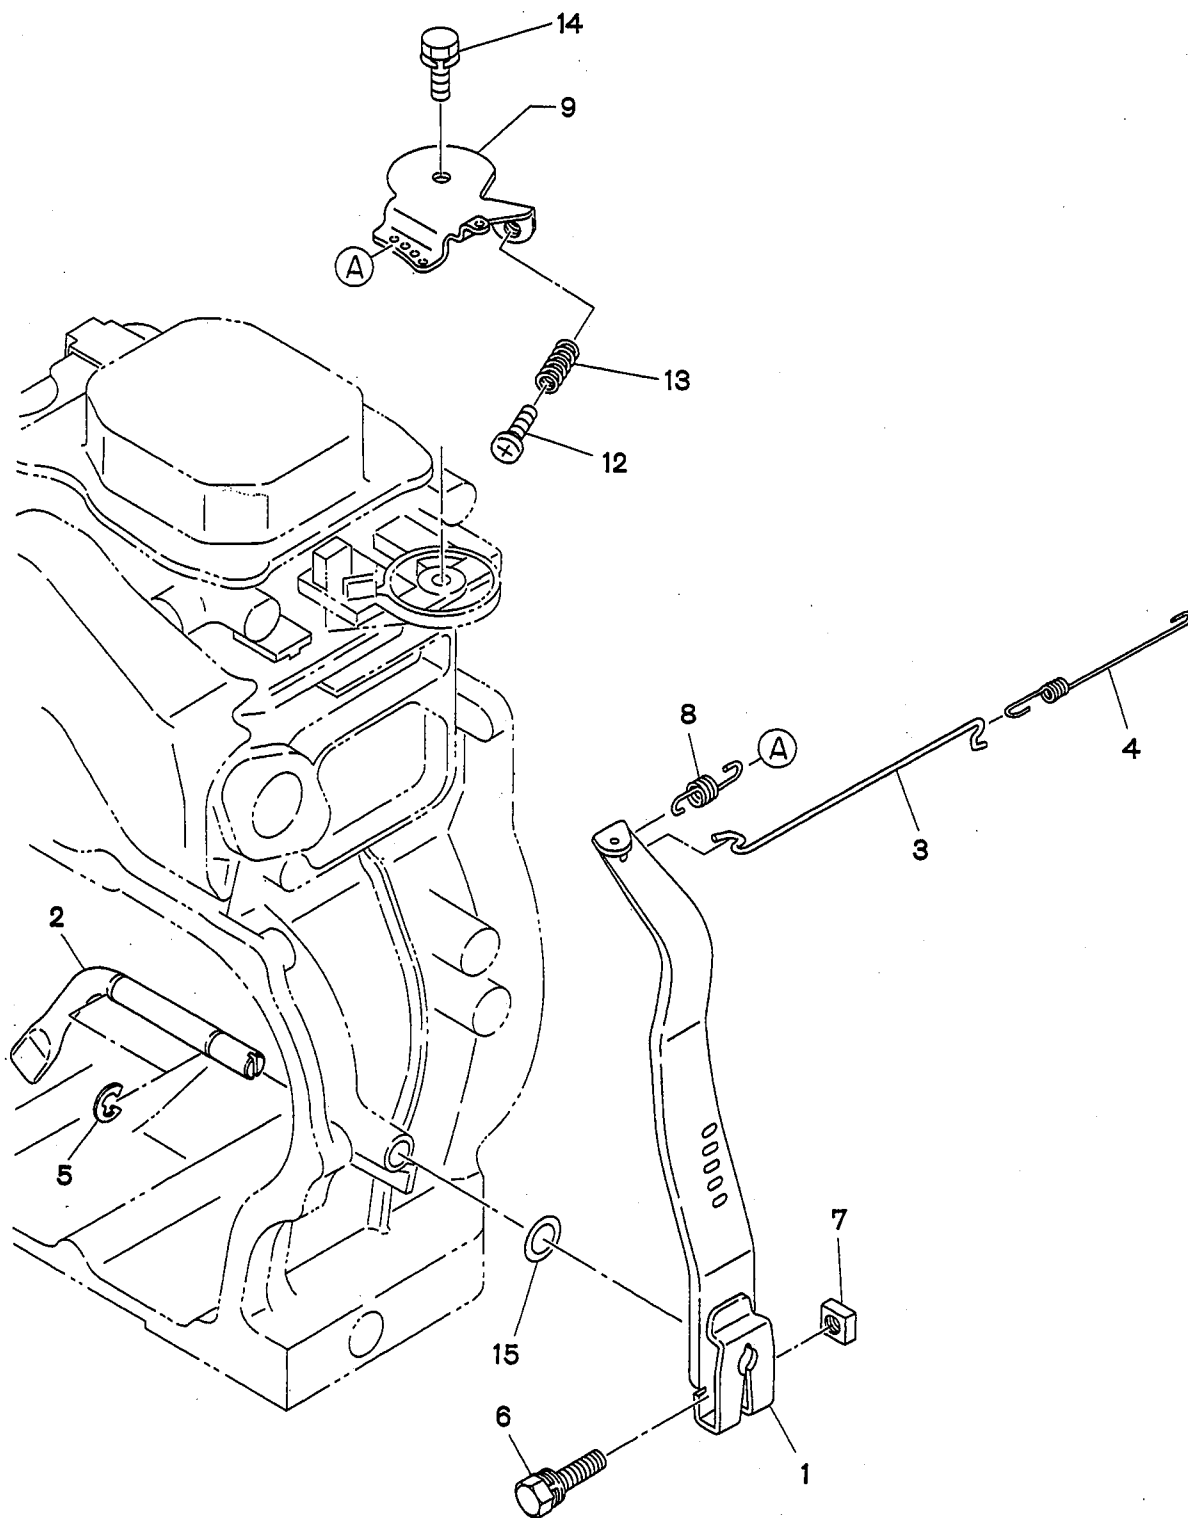

↯ Interchangeability

- 42 -

FIG.11A COOLING, STARTING (EH17)

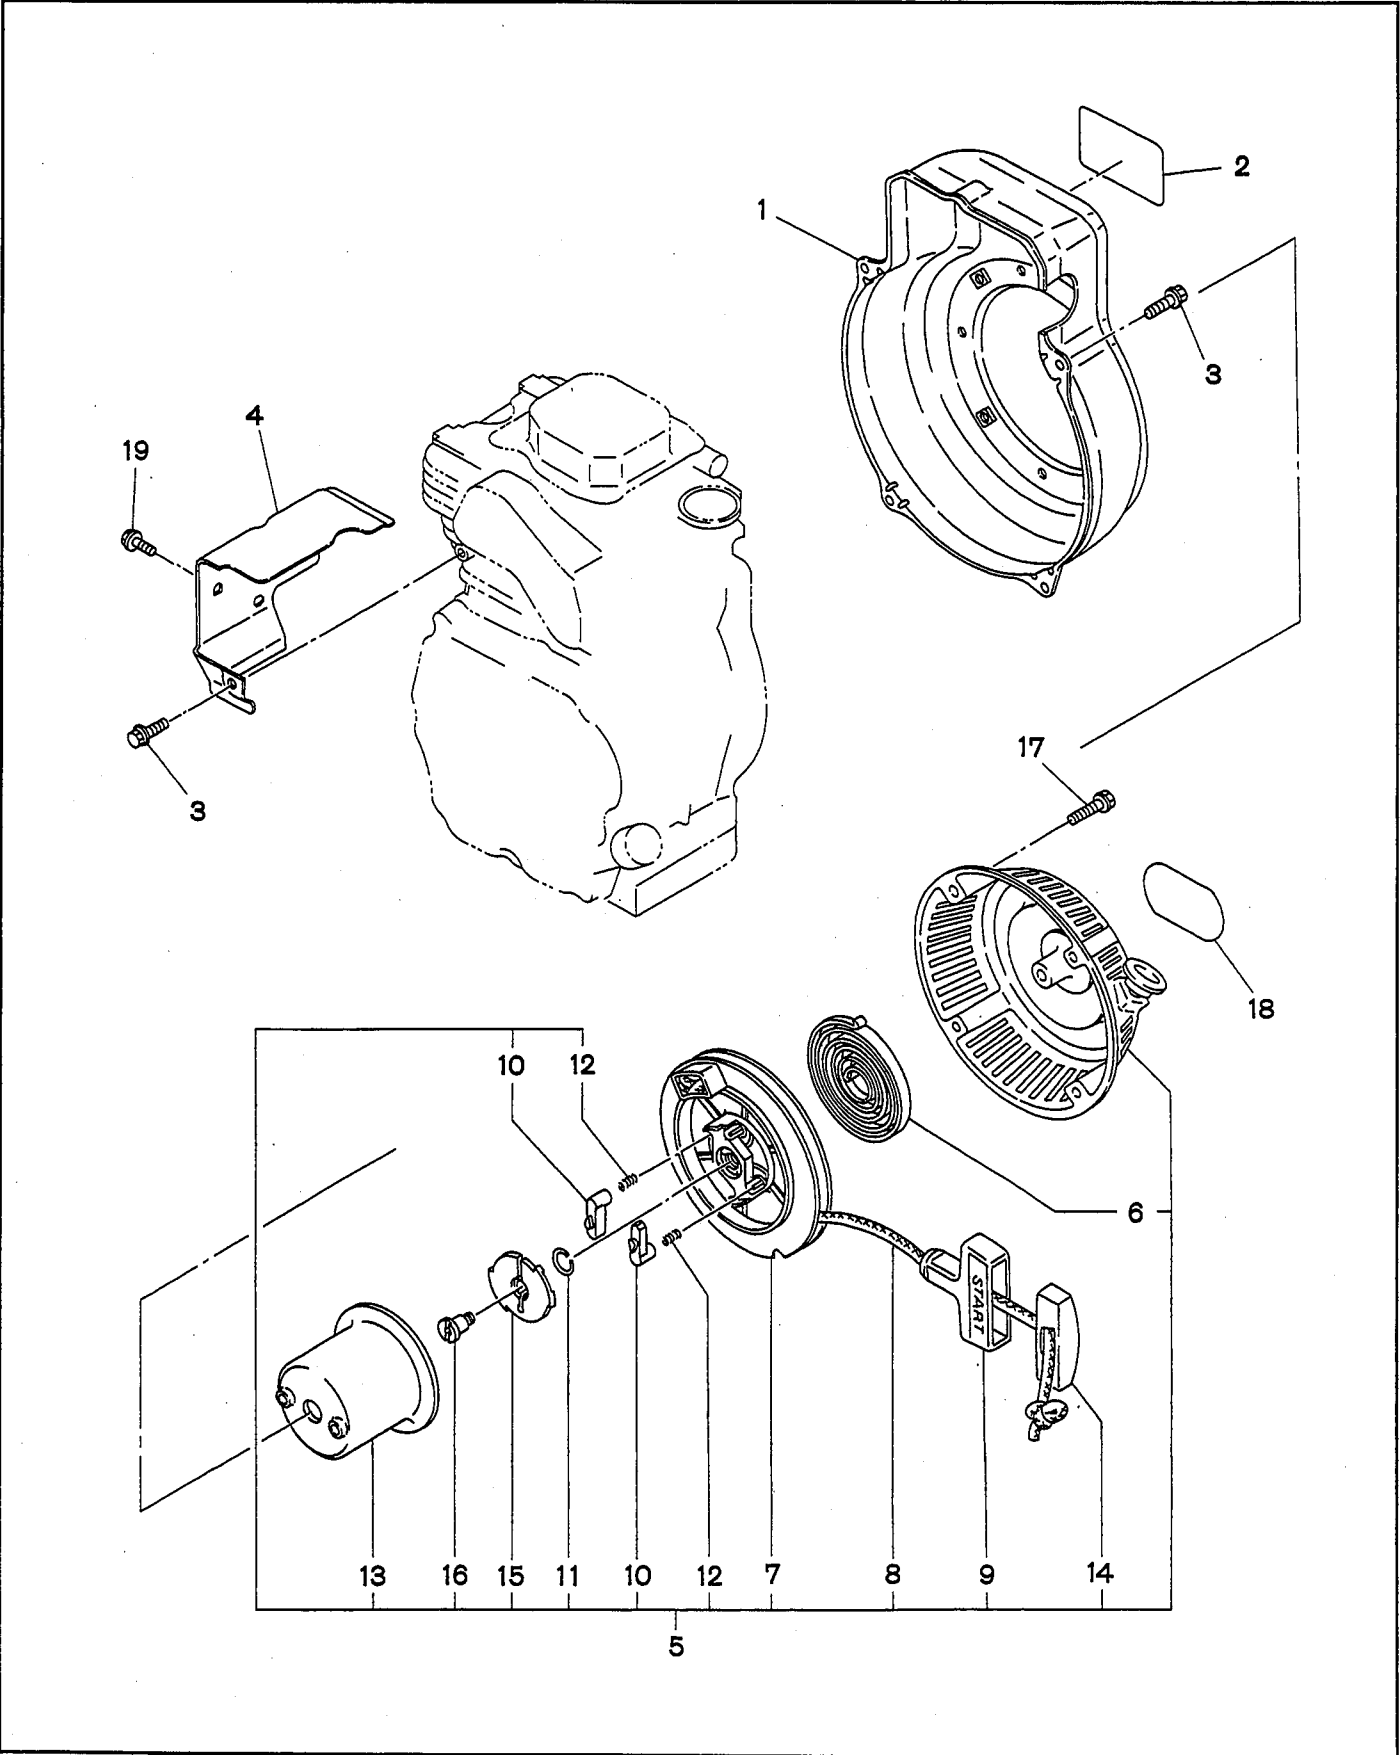


FIG.11A COOLING, STARTING (EH17)

↯ Interchangeability

[illegible]

FIG.11B COOLING, STARTING (EH17-2)


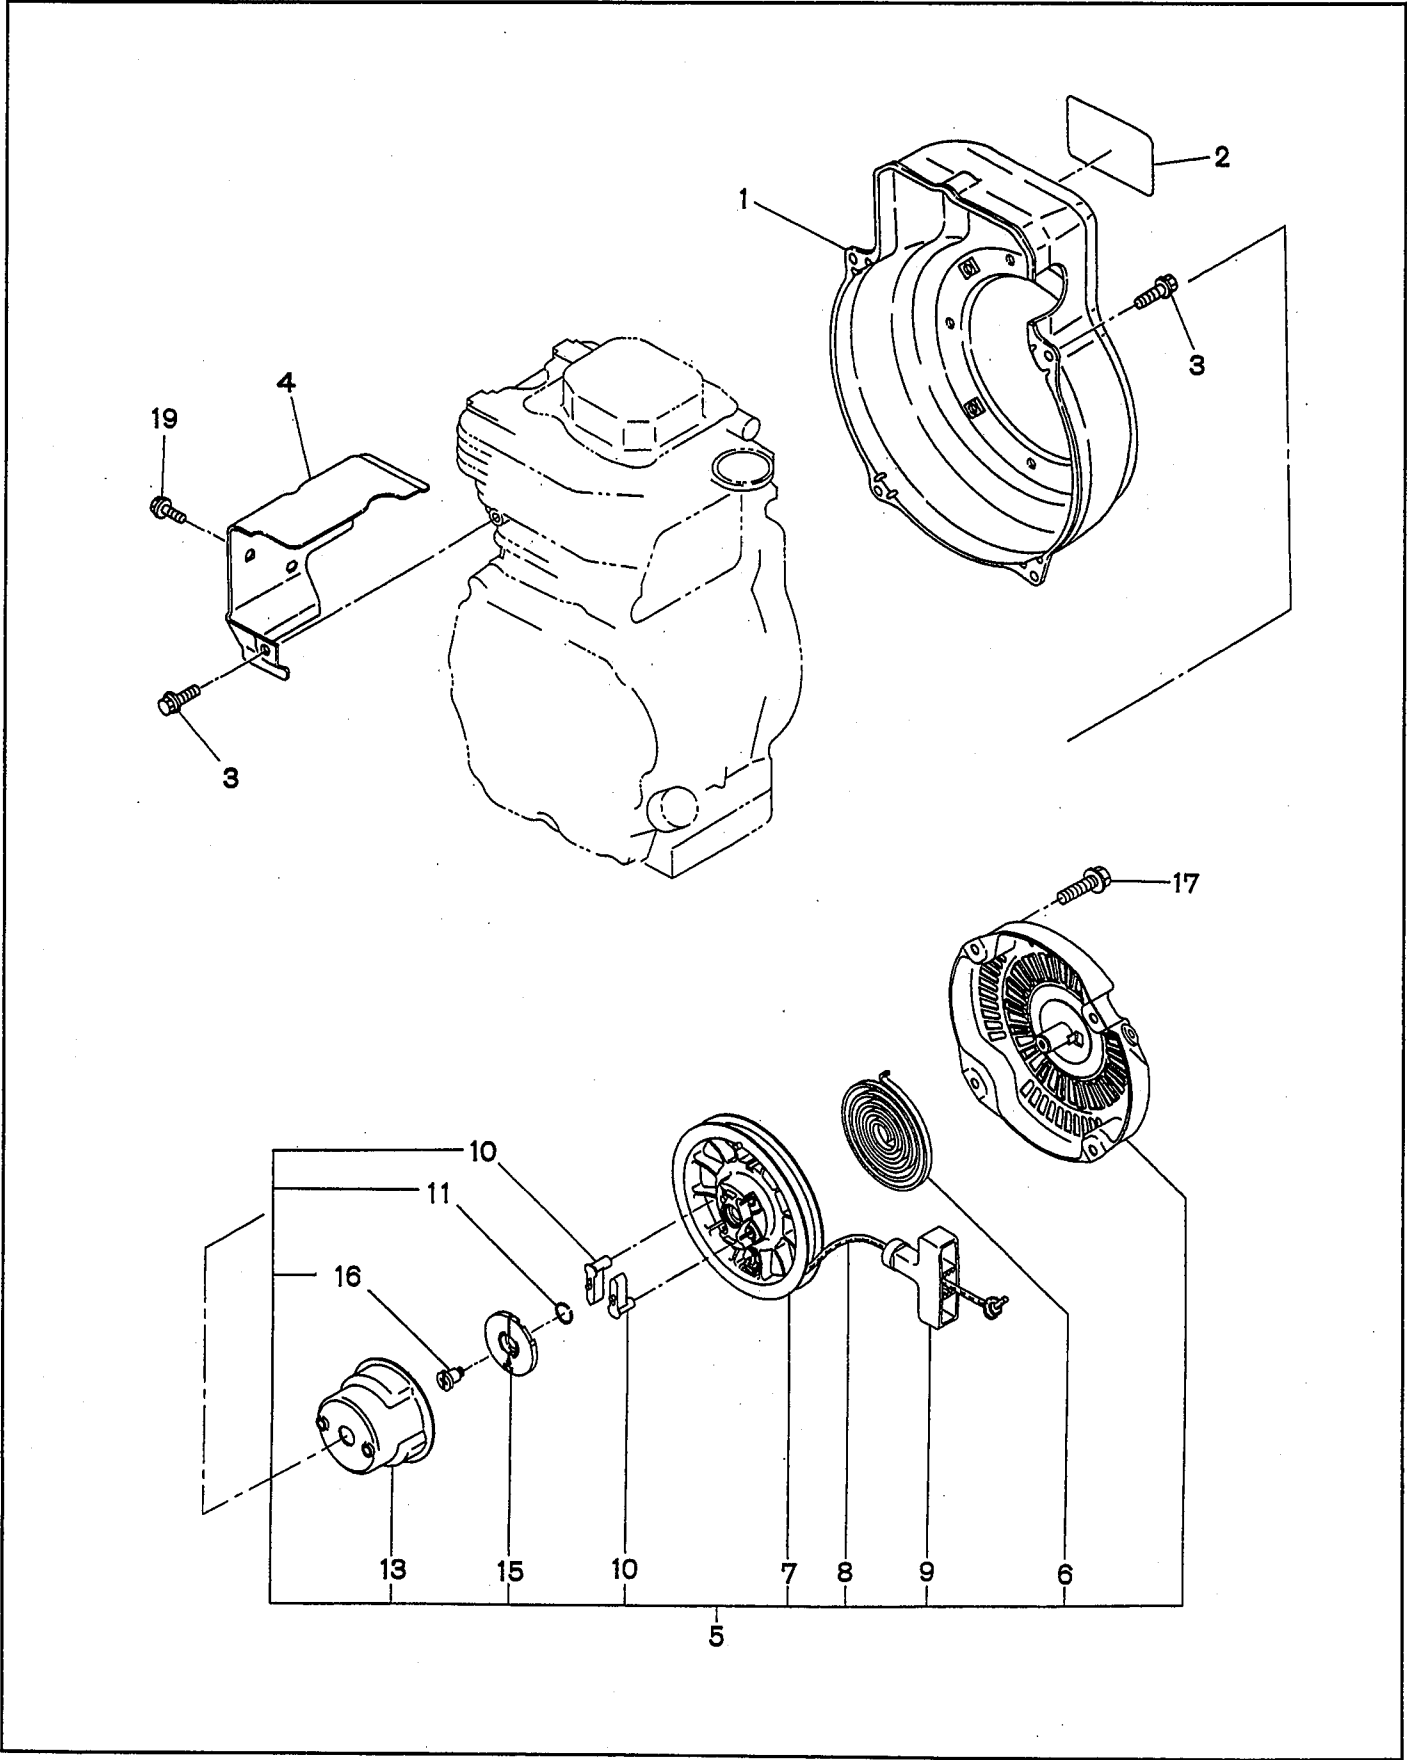


FIG.11B COOLING, STARTING (EH17-2)

↯ Interchangeability

[illegible]

FIG.12A CARBURETOR (EH17)

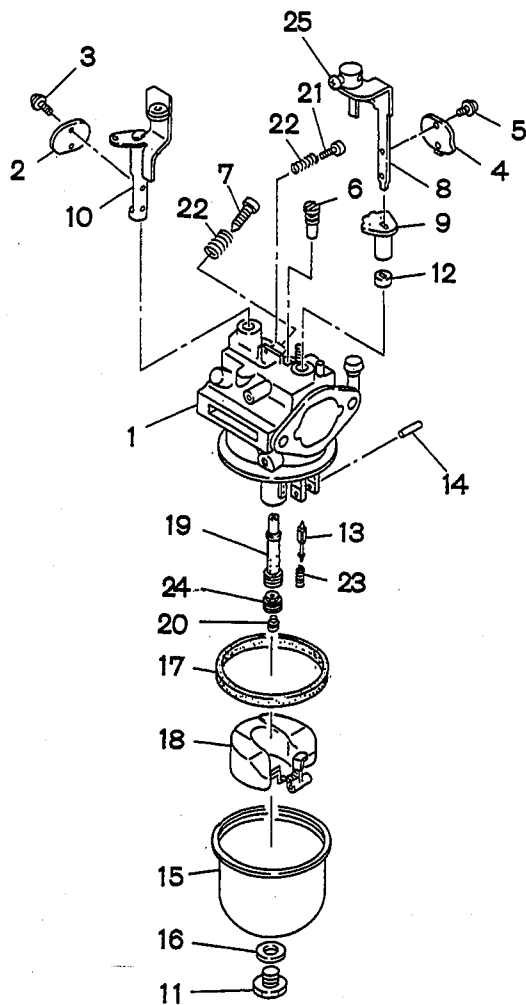

DETAIL "A"

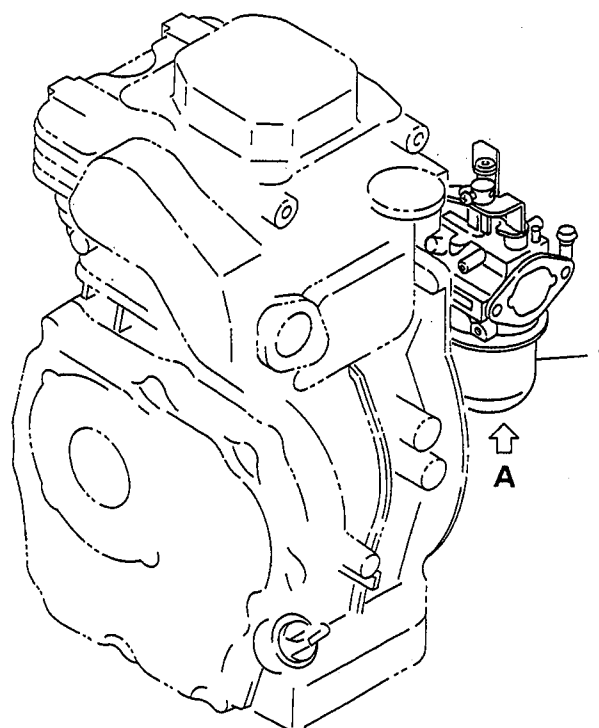


FIG.12A CARBURETOR (EH17)

↯ Interchangeability

[illegible]

FIG.12B CARBURETOR (EH17-2)




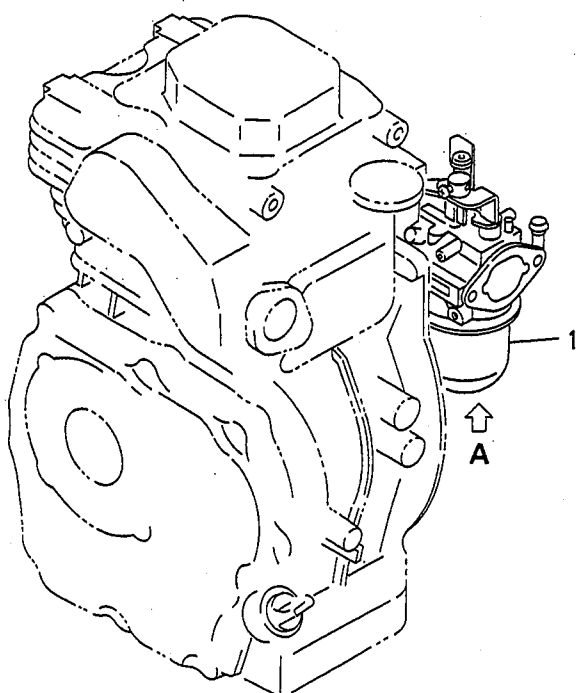


FIG.12B CARBURETOR (EH17-2)

[illegible]

FIG.13-1 MAGNETO (W/O Idle control type) (EH17 and EH17-2)

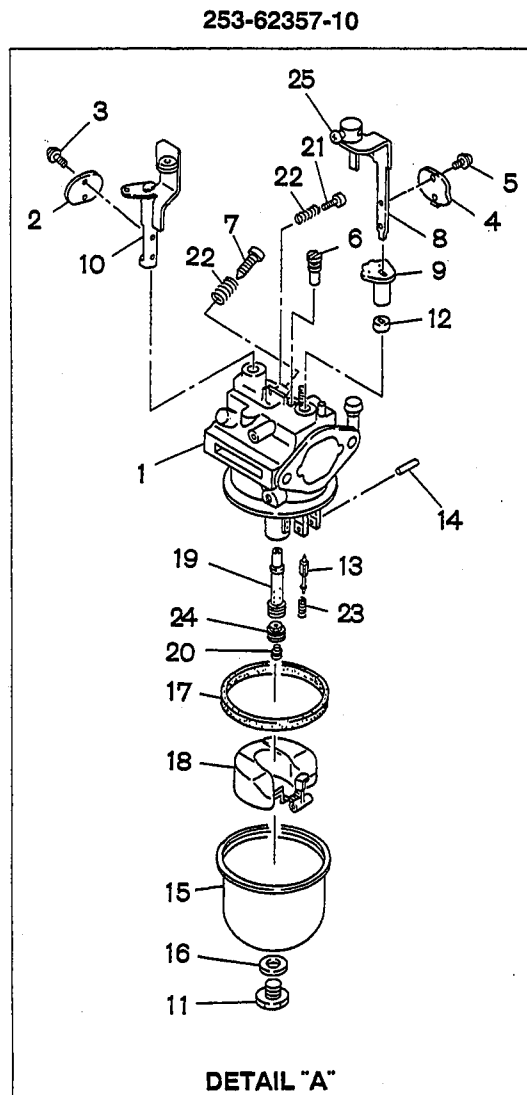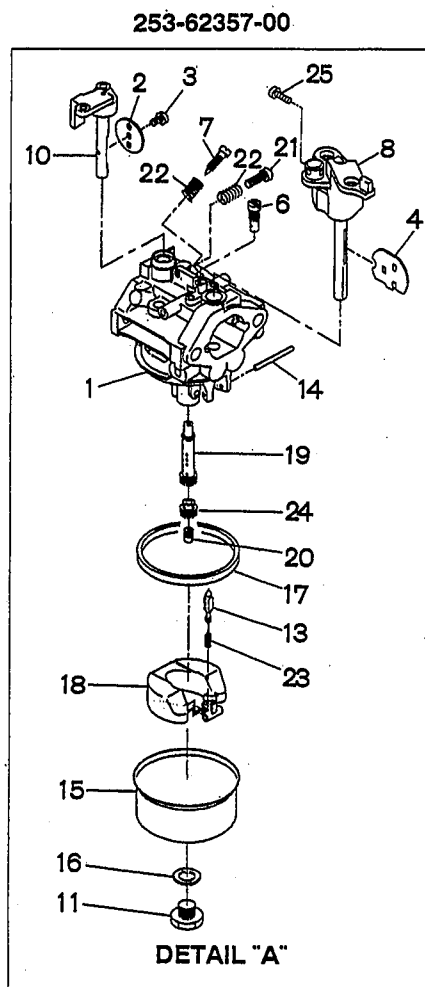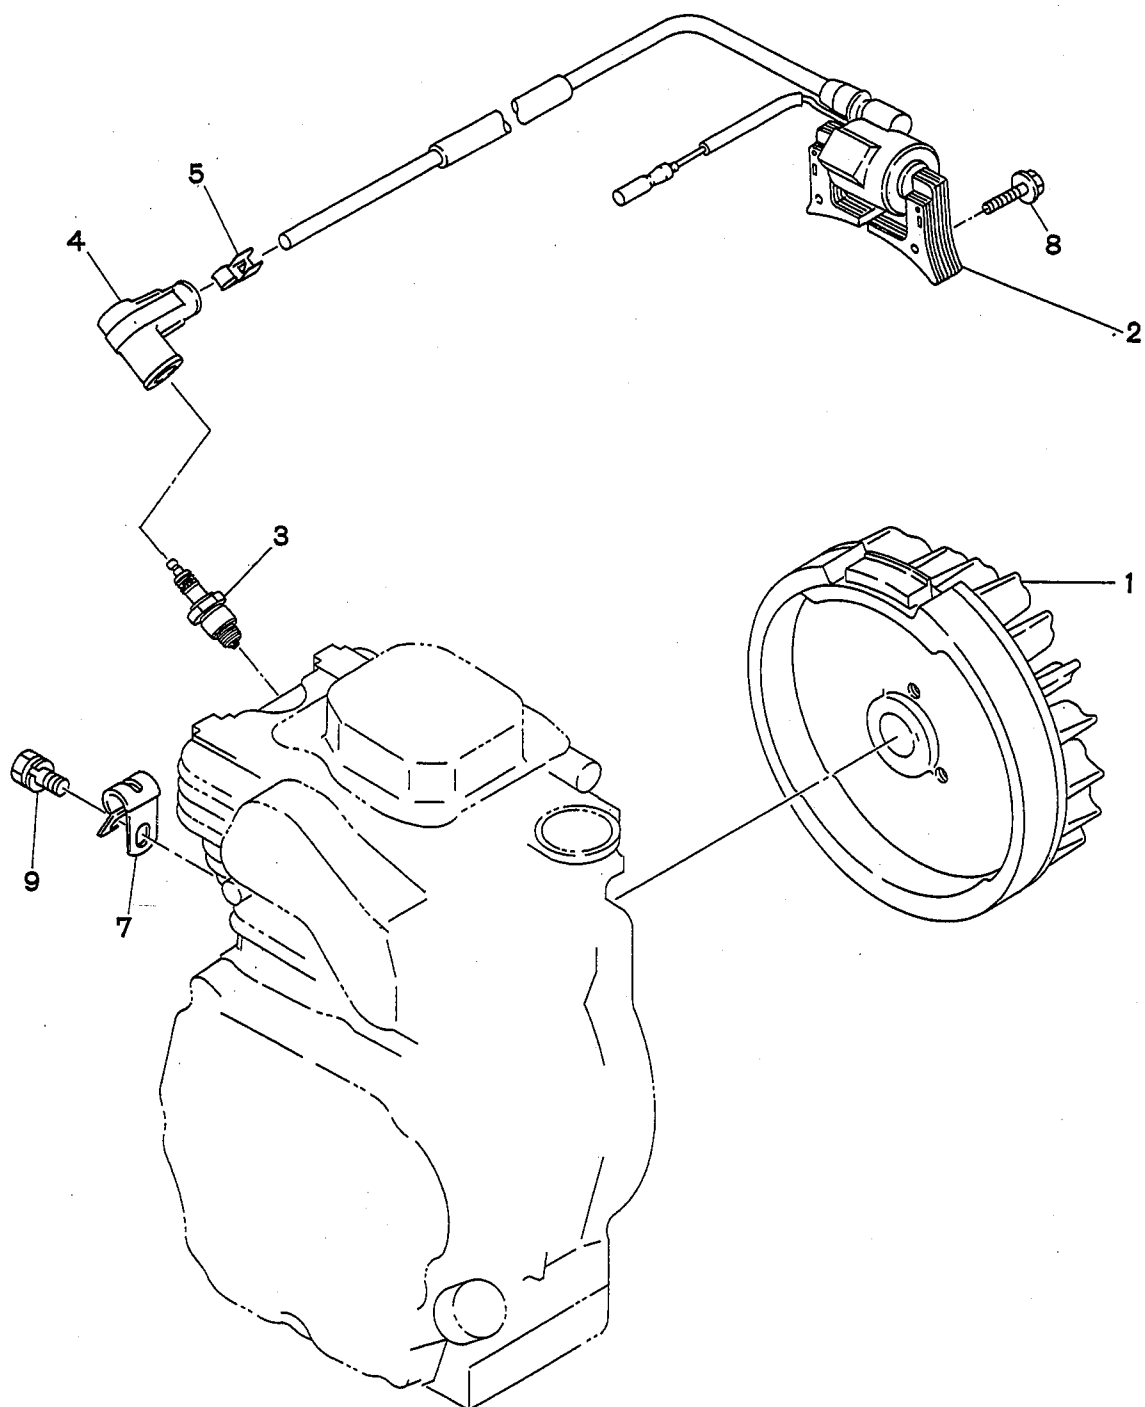

↯ Interchangeability

—52—

FIG.13-2 MAGNETO (W/ Idle control type) (EH17-2)

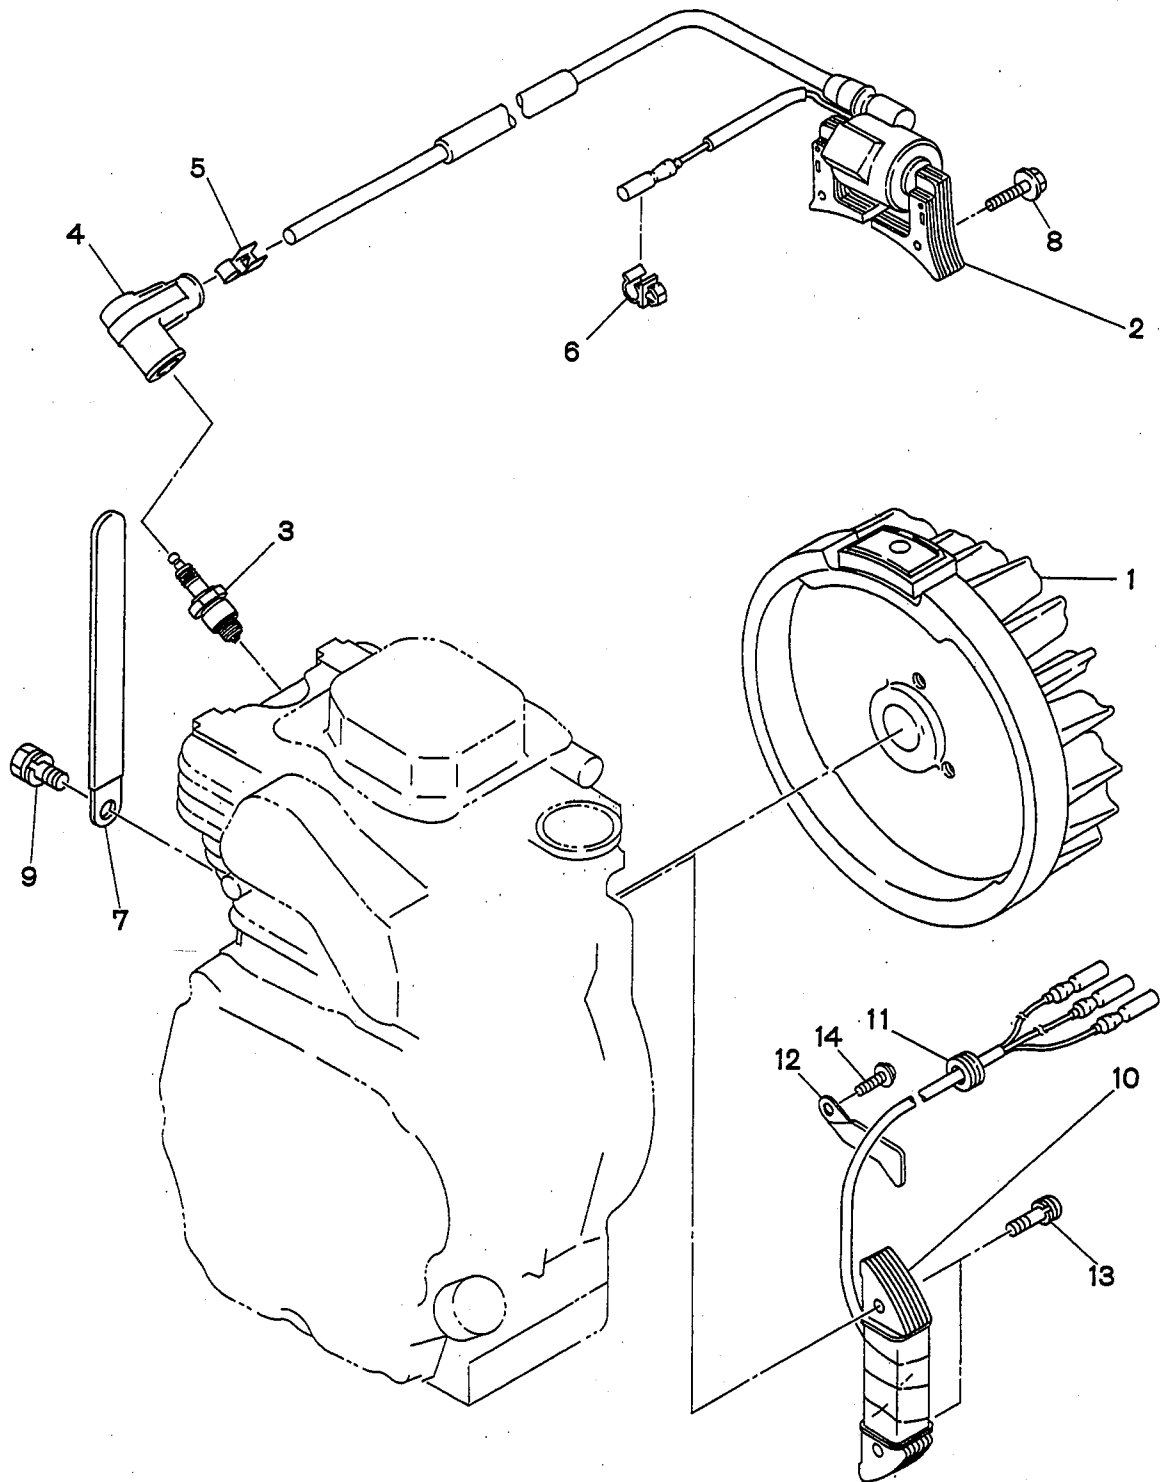


FIG.13-2 MAGNETO (W/ Idle control type) (EH17-2)

↯ Interchangeability

[illegible]

FIG.14 OIL SENSOR (EH17 and EH17-2)

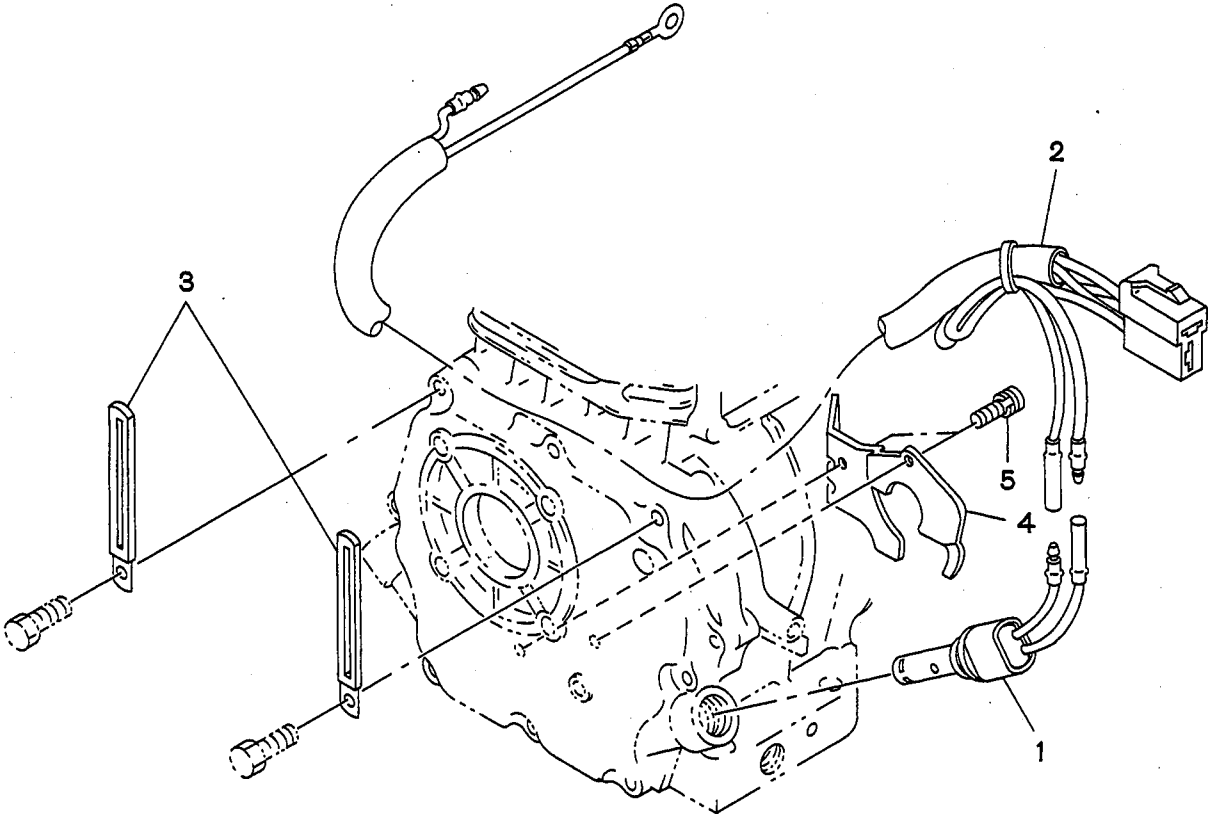


FIG.14 OIL SENSOR (EH17 and EH17-2)

[illegible]

FIG.15 SOLENOID (W/ Idle control type) (EH17-2)

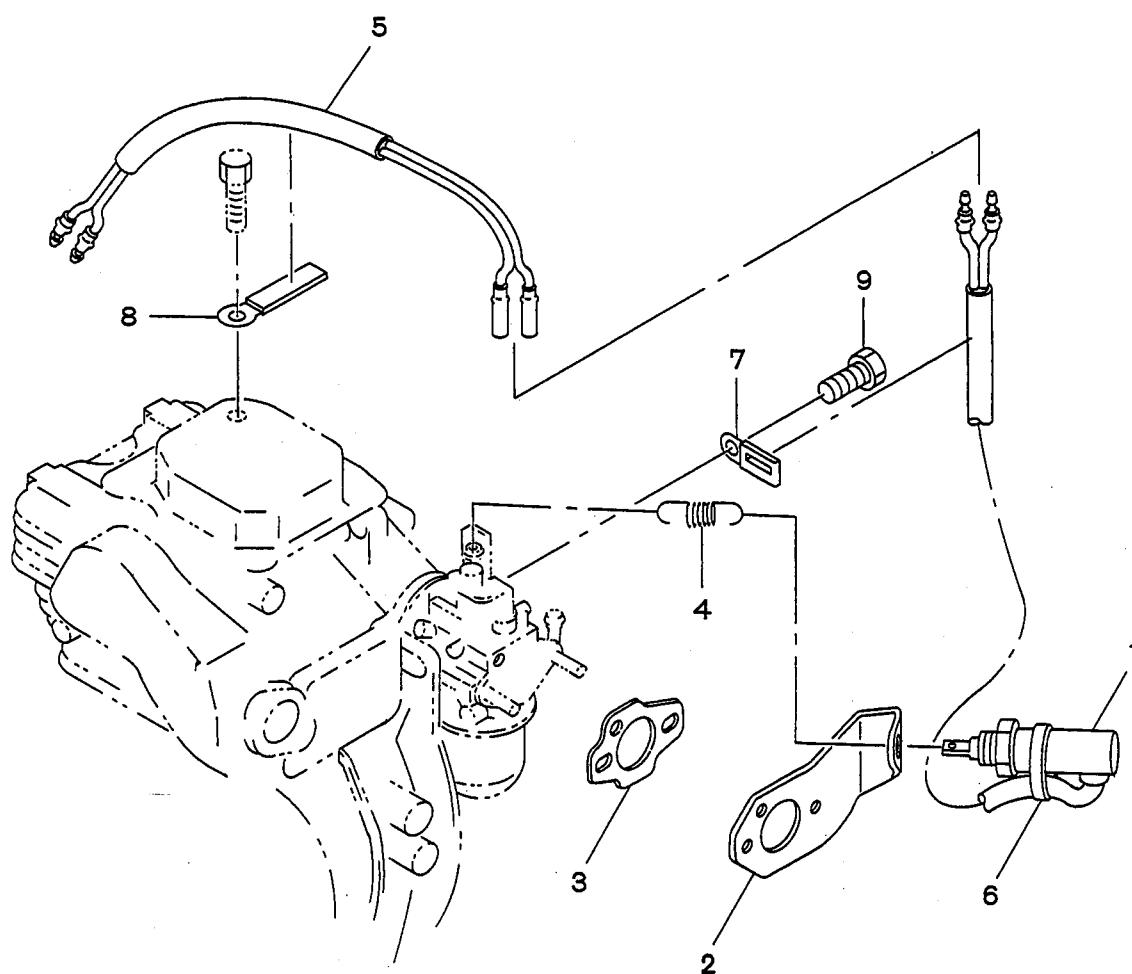


FIG.15 SOLENOID (W/ Idle control type) (EH17-2)

↯ Interchangeability

[illegible]

FIG.16 ACCESSORIES (EH17 and EH17-2)

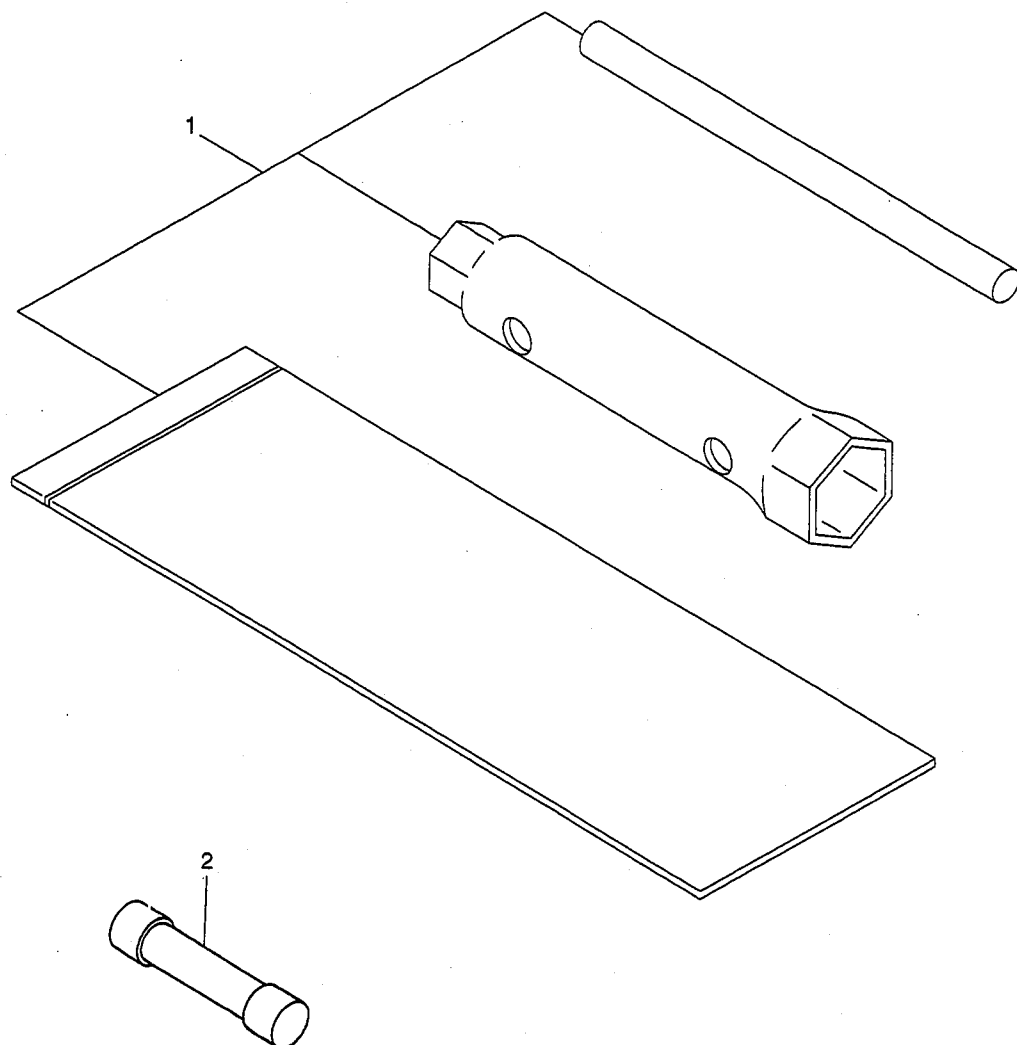


FIG.16 ACCESSORIES (EH17 and EH17-2)

↯ Interchangeability

[illegible]